

# MP5S/MP5Y/MP5W/MP5M Series

## Features

- 13 kinds of various operation modes :  
 Revolution, Speed, Frequency, Absolute ratio, Passing time,  
 Error ratio, Period, Density, Passing speed, Error,  
 Time width, Length measurement, Interval, Integration,  
 Multiplication(MP5M Series have 11 operation modes)
- Various output function :  
 Relay output, NPN/PNP open collector output,  
 Low speed serial output, BCD output,  
 PV transmission, RS485 communication output
- Various functions :  
 Prescale function, Data monitoring function, Hysteresis  
 width setting function, Max./Min. value monitoring  
 function, Delay function, Auto zero time setting function,  
 Lock setting function, Delay of display period function
- Max. display range : -19999 ~ 99999(MP5M:0~99999)
- Various display units : rpm, rps, Hz, kHz, sec, min, m, mm, mm/s, m/s,  
 m/min, m/h, l/s, l/min, l/h, %, counts, etc.
- Selectable voltage input(PNP) or No voltage input(NPN)
- 50kHz High speed response function



**⚠ Please read "Caution for your safety" in operation manual before using.**



## Ordering information

**MP 5 S - 4 N**

		Main output(Comparative value output)	Sub output(Display value output)
Output	<b>S Type</b>	N Indicator	X
		N Indicator	X
	<b>Y Type</b>	1 NPN open collector quintuple output	X
		2 PNP open collector quintuple output	X
		3 Indicator	BCD Dynamic
		4 Indicator	PV transmission(DC4-20mA)
		5 Indicator	RS485 communication output
	<b>W Type</b>	N Indicator	X
		A Quintuple relay(HH, H, GO, L, LL)	X
		1 Triple relay(H, GO, L)	X
		2 NPN open collector quintuple output	BCD Dynamic
		3 PNP open collector quintuple output	BCD Dynamic
		4 NPN open collector quintuple output	PV transmission(DC4-20mA)
5 PNP open collector quintuple output		PV transmission(DC4-20mA)	
6 NPN open collector quintuple output		Low speed serial output	
7 PNP open collector quintuple output		Low speed serial output	
8 NPN open collector quintuple output	RS485 communication output		
9 PNP open collector quintuple output	RS485 communication output		
<b>M Type</b>	N Indicator	X	
	1 Relay single-stage(High-limit) output + NPN open collector output	X	
	2 Relay dual-stage(High/Low-limit) output + NPN open collector output	X	
Power supply		4 100-240VAC 50/60Hz	
Size		S DIN W48×H48mm	
		Y DIN W72×H36mm	
		W DIN W96×H48mm	
		M DIN W72×H72mm	
Digit		5 5digit(99999)	
Series		MP Pulse meter	

\*PNP open collector output : Option

# Pulse(Rate) Meter

## ■ Specifications(MP5S/MP5Y/MP5W Series)

Series	MP5S	MP5Y	MP5W
Display method	7 Segment LED(Zero blanking type)		
Character size	W4 × H8mm	W6.8 × H13.8mm	
Max. indication	-19999 ~ 99999		
Power supply	100-240VAC 50/60Hz		
Allowable operation voltage	Allowable operation voltage: 90 ~ 110%		
Power consumption	Approx. 7.5VA(240VAC)	Approx. 3.5VA(240VAC)	Approx. 6VA
Power for external sensor	12VDC ±10%, 80mA		
Input frequency	<ul style="list-style-type: none"> <li>• Solid-state input : Max. 50kHz(Pulse width:Each over 10<math>\mu</math>s)</li> <li>• Contact input : Max. 45Hz(Pulse width:Over 11ms)</li> </ul>		
Input level	[Voltage input] High : 4.5-24VDC, Low : 0-1.0VDC, Input impedance : 4.5k $\Omega$ [No-voltage input] Impedance at short-circuit : Max. 300 $\Omega$ , Residual voltage : Max. 1V Impedance at open-circuit : Min. 100k $\Omega$		
Measuring range	<ul style="list-style-type: none"> <li>• Mode F1, F2, F7, F8, F9, F10 : 0.0005Hz ~ 50kHz</li> <li>• Mode F3 : 0.02s ~ 3,200s</li> <li>• Mode F4, F5, F6 : 0.01s ~ 3,200s</li> <li>• Mode F11, F12, F13 : 0 ~ 4 × 10<sup>9</sup> Count</li> </ul>		
Measuring accuracy (23 ±5℃)	<ul style="list-style-type: none"> <li>• Mode F1, F2, F7, F8, F9, F10 : F.S. ±0.05% rdg ±1Digit</li> <li>• Mode F3, F4, F5, F6 : F.S. ±0.01% rdg ±1Digit</li> </ul>		
Display period	0.05 / 0.5 / 1 / 2 / 4 / 8sec.(It is same with period of output update.)		
Operation mode	Number of revolution/Speed/Frequency (F1), Passing speed(F2), Cycle(F3), Passing time(F4), Time width(F5), Time interval(F6), Absolute ratio(F7), Error ratio(F8), Density(F9), Error(F10), Length measurement(F11), Interval(F12), Multiplication(F13) <b>*Refer to F-19~22 for the operation mode.</b>		
Prescale function	Direct input method(0.0001×10 <sup>-9</sup> to 9.9999×10 <sup>9</sup> )		
Hysteresis	<b>(Note1)</b>	0 to 9999	
Other functions	<ul style="list-style-type: none"> <li>• Lock the setting value function</li> <li>• Auto-Zero time setting function</li> <li>• Time unit selection function</li> <li>• Monitoring function : Memorize max. value</li> <li>• Memory protection function (Mode F13 applied only)</li> </ul>	<ul style="list-style-type: none"> <li>• Lock the setting value function</li> <li>• Monitoring delay function</li> <li>• Auto-Zero time setting function</li> <li>• Current output range selection (Current output type only)</li> <li>• Comparative output function (HH, H, GO, L, LL)</li> <li>• Time unit selection function</li> <li>• Deviation memory function (F output mode applied only)</li> <li>• Monitoring function : Memorize max. value or min. value</li> <li>• Remote/Local switching function (Communication output type only)</li> <li>• Data Bank switching function <b>(Note2)</b></li> <li>• Memory protection function (Mode F13 applied only)</li> </ul>	
Main output	Triple relay		250VAC 3A resistive load 3a
	Quintuple relay		250VAC 3A resistive load 5a
	NPN Open collector (Quintuple)	—	12-24VDC 20mA Max.
	PNP Open collector (Quintuple)	12-24VDC 30mA Max.	
Sub output	BCD Dynamic	—	NPN Open collector 12-24VDC 30mA Max.
	Low speed serial output	—	NPN Open collector 12-24VDC 20mA Max.
	PV transmission	—	DC4-20mA Load 600 $\Omega$ Max.
	RS485 communication	—	DC4-20mA Load 600 $\Omega$ Max.
Memory protection	Non-volatile memory (Input : Min. 100,000 times)		
Insulation resistance	Min. 100M $\Omega$ (at 500VDC mega) Between charge part and non-charge part		
Dielectric strength	2000VAC 60Hz 1minute (Between terminals of AC power and case, Between terminals of AC power and measuring input terminals)		
Impulse noise strength	±2000VAC the square wave noise (pulse width:1 $\mu$ s) by the noise simulator, Repeat frequency 60Hz		
Vibration	Mechanical	0.75mm amplitude at frequency of 10 ~ 55Hz in each of X, Y, Z directions for 2 hour	
	Malfunction	0.5mm amplitude at frequency of 10 ~ 55Hz in each of X, Y, Z directions for 10 minutes	
Shock	Mechanical	300m/s <sup>2</sup> (30G) in X, Y, Z directions for 3 times	
	Malfunction	100m/s <sup>2</sup> (10G) in X, Y, Z directions for 3 times	
Relay life cycle	Malfunction	—	Min. 10,000,000 times
	Mechanical	—	Min. 100,000 times (250VAC 3A Load current)
Ambient temperature	-10 ~ +50℃ (at non-freezing status)		
Storage temperature	-20 ~ +60℃ (at non-freezing status)		
Ambient humidity	35 ~ 85%RH		
Unit weight	Approx. 130g	Approx. 135g	Approx. 230g

\* **(Note1)** The hysteresis setting range is changed by the setting position of decimal point. (Refer to F-25 for hysteresis function.)

\* **(Note2)** Data Bank switching function is in MP5W series only.

(A) Counter

(B) Timer

(C) Temp. controller

(D) Power controller

(E) Panel meter

(F) Tacho/Speed/Pulse meter

(G) Display unit

(H) Sensor controller

(I) Switching power supply

(J) Proximity sensor

(K) Photo electric sensor

(L) Pressure sensor

(M) Rotary encoder


(N) Stepping motor & Driver & Controller

(O) Graphic panel

(P) Production stoppage models & replacement

# MP5S/MP5Y/MP5W/MP5M Series

## Specifications(MP5M Series)

Model	MP5M-4N	MP5M-41	MP5M-42
	Indicator	High-limit setting type	High/Low-limit setting type
Display method	7 Segment LED(Zero Blanking), Letter size : W4 X H8mm		
Max. indication	0.0001 ~ 99999		
Power supply	100-240VAC 50/60Hz		
Allowable operation voltage	Allowable operation voltage: 90 ~ 110%		
Power consumption	Approx. 7.5VA(240VAC)	Approx. 8VA(240VAC)	
Power for external sensor	12VDC $\pm$ 10%, 80mA		
Input frequency	<ul style="list-style-type: none"> <li>Solid-state input : Max. 50kHz(pulse width:over 10<math>\mu</math>s)</li> <li>Contact input : Max. 45Hz(pulse width:over 11ms)</li> </ul>		
Input level	[Voltage input] High : 4.5-24VDC, Low : 0-1.0VDC, Input impedance : 4.5k $\Omega$ [No-voltage input] Impedance at short-circuit : Max. 300 $\Omega$ , Residual voltage : Max. 1V Impedance at open-circuit : Min. 100k $\Omega$		
Measuring range	<ul style="list-style-type: none"> <li>Mode F1, F2, F7, F8 : 0.0005Hz ~ 50kHz</li> <li>Mode F3 : 0.02s ~ 3,200s</li> <li>Mode F4, F6 : 0.01s ~ 3,200s</li> <li>Mode F9, F10, F11 : 0 ~ 4 <math>\times</math> 10<sup>9</sup> Count</li> </ul>		
Measuring accuracy (23 $\pm$ 5 $^{\circ}$ C)	<ul style="list-style-type: none"> <li>Mode F1, F2, F7, F8 : F.S. <math>\pm</math>0.05% rdg <math>\pm</math>1Digit</li> <li>Mode F3, F4, F5, F6 : F.S. <math>\pm</math>0.01% rdg <math>\pm</math>1Digit</li> </ul>		
Display period	0.05 / 0.5 / 1 / 2 / 4 / 8sec.(It is same with period of output update.)		
Operation mode	Number of revolution/Speed/Frequency(F1), Passing speed(F2), Period(F3), Passing time(F4), Time width(F5), Time interval(F6), Absolute ratio(F7), Density(F8), Length measurement(F9), Interval(F10), Multiplication(F11) <b>※Refer to F-19~22 for operation mode.</b>		
Prescale function	Direct input method(0.0001 $\times$ 10 <sup>-9</sup> ~ 9.9999 $\times$ 10 <sup>9</sup> )		
Hysteresis	————	(Note1) 0 ~ 9999	
Other function	<ul style="list-style-type: none"> <li>Lock the setting value function</li> <li>Auto-Zero time setting function</li> <li>Time unit selection function</li> <li>Display value monitoring function</li> <li>Memory protection function (Mode F11 applied only)</li> </ul>	<ul style="list-style-type: none"> <li>Lock the setting value function</li> <li>Monitoring delay function</li> <li>Auto-Zero time setting function</li> <li>Time unit selection function</li> <li>Display value monitoring function</li> <li>Memory protection function (Mode F11 applied only)</li> <li>High-limit output function(H)</li> </ul>	<ul style="list-style-type: none"> <li>Lock the setting value function</li> <li>Monitoring delay function</li> <li>Auto-Zero time setting function</li> <li>Time unit selection function</li> <li>Display value monitoring function</li> <li>Memory protection function (Mode F11 applied only)</li> <li>Comparative output function(H, L)</li> <li>Output mode selection function (S, H, L, B, I, F)</li> <li>Deviation memory function (F output mode applied only)</li> </ul>
Main output	Relay output	250VAC 3A resistive load 1c	250VAC 3A resistive load 1a $\times$ 2
	NPN Open Collector	30VDC 100mA Max.	30VDC 100mA Max. $\times$ 2
Memory protection	Non-volatile memory (Input : Min. 100,000 times)		
Approval			
Unit weight	Approx. 275g	Approx. 310g	Approx. 330g


※MP5S, MP5Y, MP5W have same function.

※(Note1) The hysteresis setting range is changed by the setting position of decimal point. (Refer to F-25 Page, hysteresis function.)


## Connections

### MP5M Series


#### MP5M-4N(Indicator)

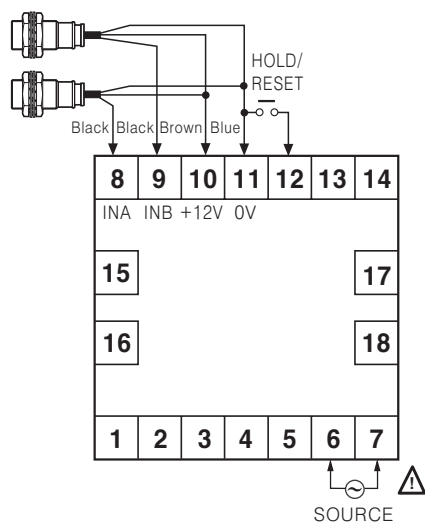

#### MP5M-41(High-limit setting type)

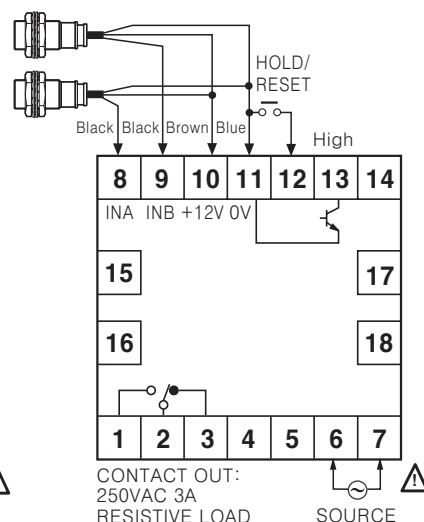

#### MP5M-42(High/Low-limit setting type)

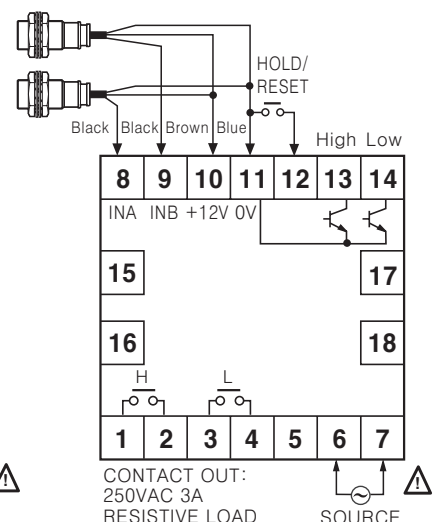


# Pulse(Rate) Meter

## Connections


### MP5S Series

#### MP5S-4N(Indicator)

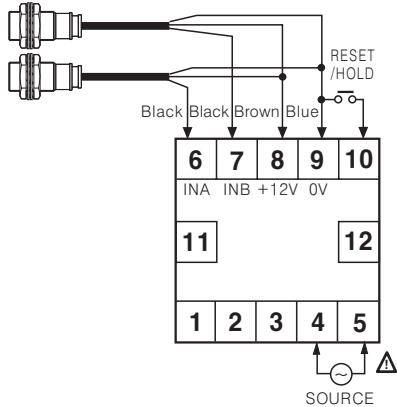


### MP5Y Series

#### MP5Y-4N(Indicator)

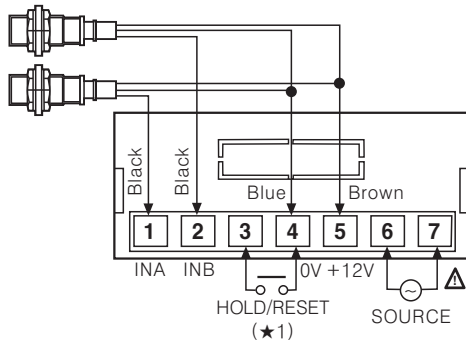

#### Main output / Sub output type

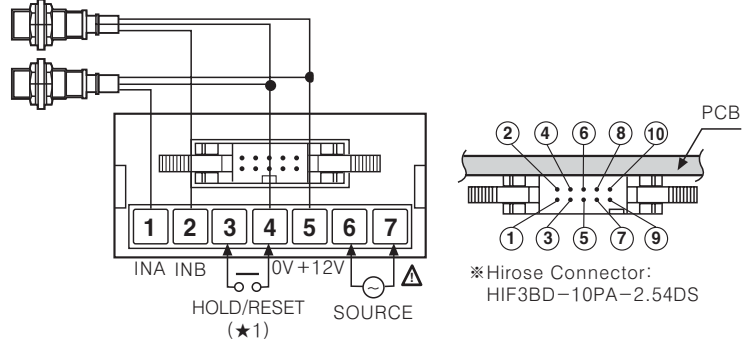


※(★1) It is used for RESET terminal when an operation mode is F13. (Refer to F-19~22 for operation mode.)

### Main output(Connector)


#### MP5Y-41(NPN Open Collector output)

**MAIN OUT**  
(NPN OPEN COLLECTOR:12-24VDC Max. 30mA)

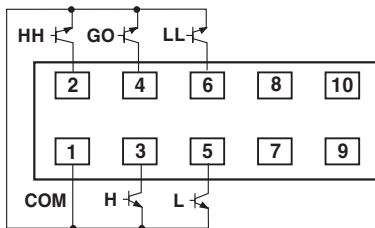

#### MP5Y-42(PNP Open Collector output)


**MAIN OUT**  
(PNP OPEN COLLECTOR:12-24VDC Max. 30mA)

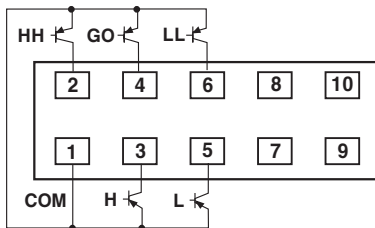

### Sub output(Connector)


#### MP5Y-43(BCD Dynamic output)

**BCD OUT**  
(NPN OPEN COLLECTOR:12-24VDC Max. 30mA)

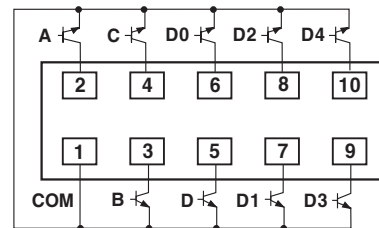


#### MP5Y-44(PV transmission output)

**DC4-20mA**  
Load 600Ω Max.

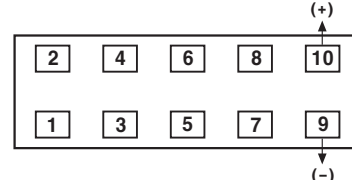

#### MP5Y-45(RS485 communication output)

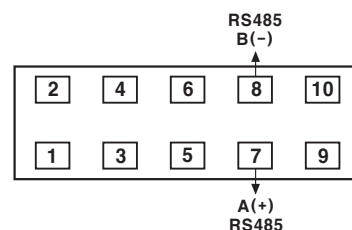

※Main output type & Sub output type : Customizable

(A) Counter

(B) Timer

(C) Temp. controller

(D) Power controller

(E) Panel meter

(F) Tacho/Speed/Pulse meter

(G) Display unit

(H) Sensor controller

(I) Switching power supply

(J) Proximity sensor

(K) Photo electric sensor

(L) Pressure sensor

(M) Rotary encoder

(N) Stepping motor & Driver & Controller


(O) Graphic panel

(P) Production stoppage models & replacement

# MP5S/MP5Y/MP5W/MP5M Series


## ◎MP5W Series

### ●MP5W-4N(Indicator)

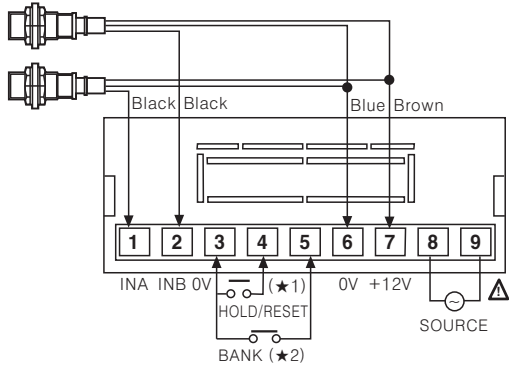


- ※(★1) It is used for RESET terminal when an operation mode is F13. (Refer to F-19~22)
- ※(★2) Refer to F-25 for BANK function.
- ※Main output type & Sub output type : option

### ●MP5W-4A(Quintuple relay output)

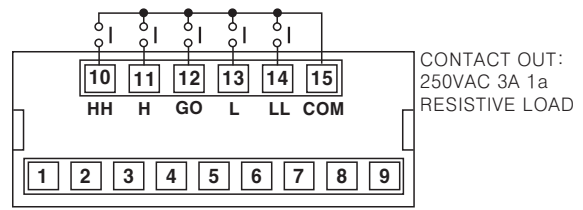



CONTACT OUT:  
250VAC 3A 1a  
RESISTIVE LOAD

### ●MP5W-41(Triple relay output)

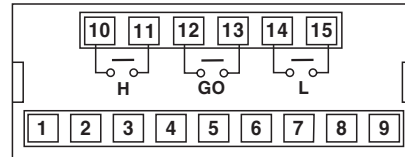



CONTACT OUT:  
250VAC 3A 1a  
RESISTIVE LOAD

### ◆Main output+Sub output(Connector)

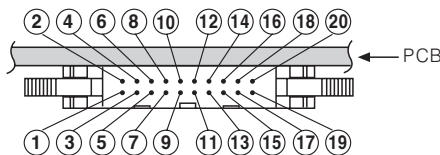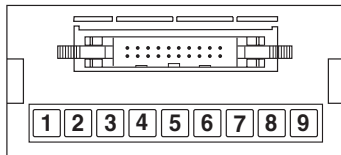



- ※Hirose connector pin header model of the unit : HIF3BA-20PA-2.54DS
- ※Contact Hirose Electric to purchase socket and wires of Hirose connector. [Socket : HIF3BA-20D-2.54R]

### ●MP5W-42/ MP5W-43(NPN/PNP Open Collector output + BCD output)

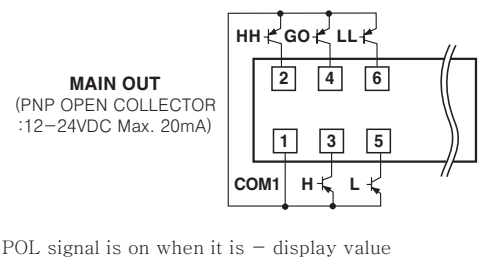
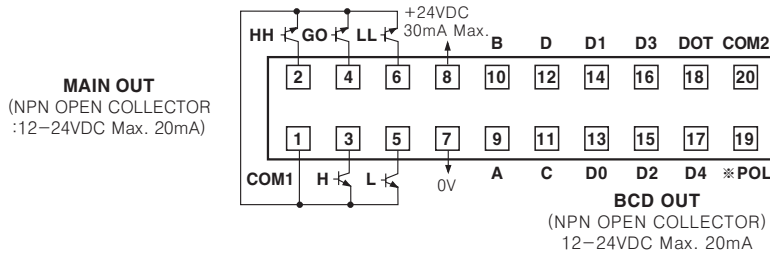


※POL signal is on when it is - display value



### ●MP5W-44/ MP5W-45(NPN/PNP Open Collector output + PV transmission output(DC4-20mA) output)

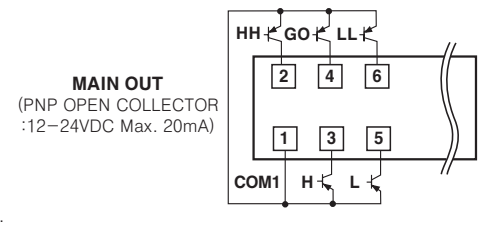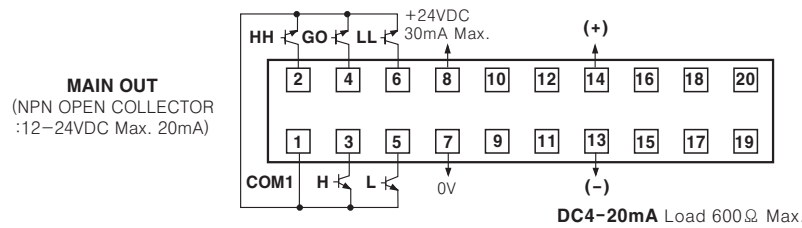

### ●MP5W-46/ MP5W-47(NPN/PNP Open Collector output + Low speed serial output)

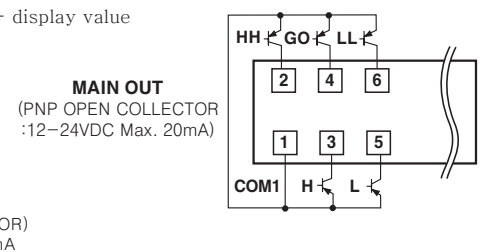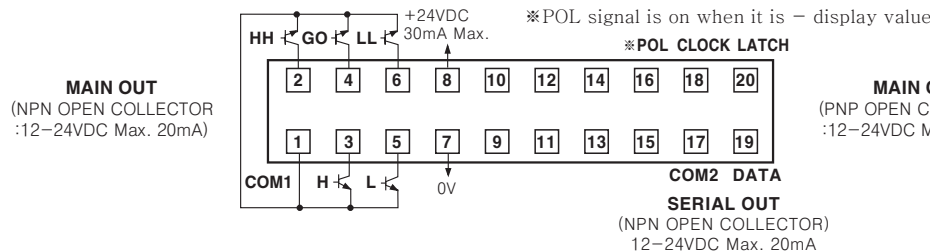



### ●MP5W-48/ MP5W-49(NPN/PNP Open Collector output + RS485 communication output)

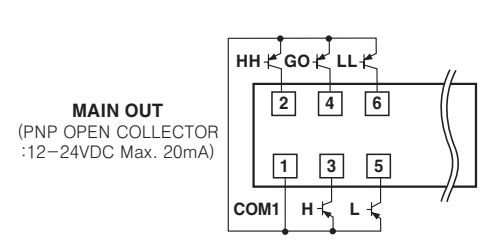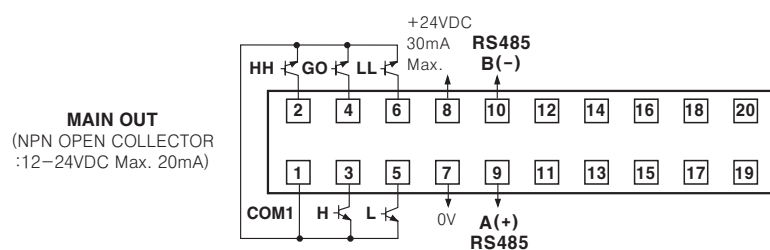


# Pulse(Rate) Meter

## ■ Dimensions

### ●MP5S Series

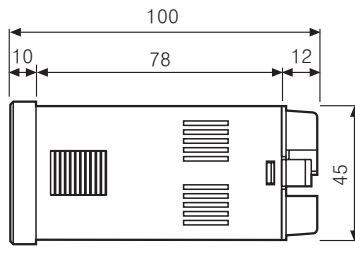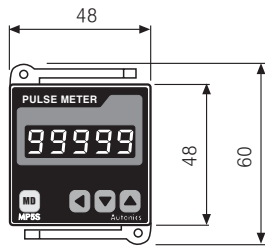



### ●Panel cut-out

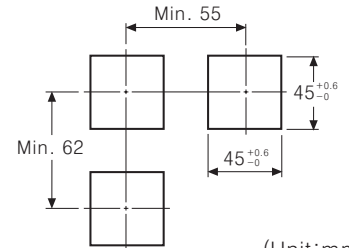


(Unit:mm)

(A) Counter  
(B) Timer  
(C) Temp. controller

### ●MP5Y Series

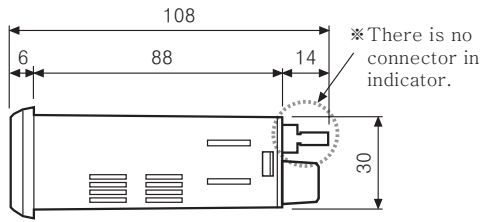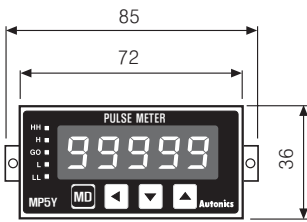


### ●Panel cut-out

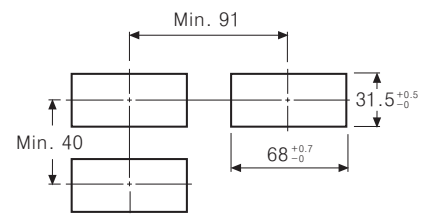


(Unit:mm)

(D) Power controller  
(E) Panel meter  
(F) Tacho/Speed/Pulse meter


### ●MP5W Series

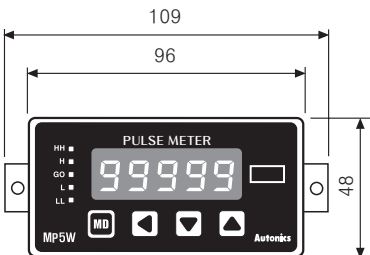

### [Terminal block type]

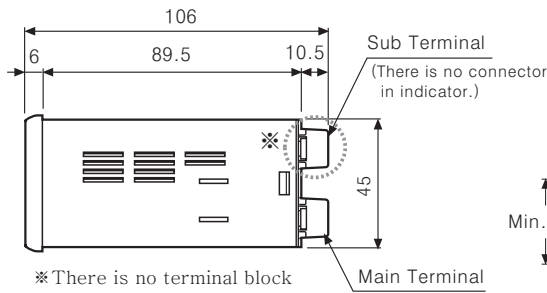


### ●Panel cut-out

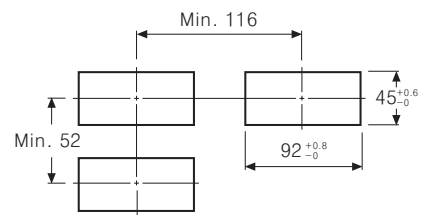

(Unit:mm)



(G) Display unit  
(H) Sensor controller  
(I) Switching power supply  
(J) Proximity sensor

### [Connector type]

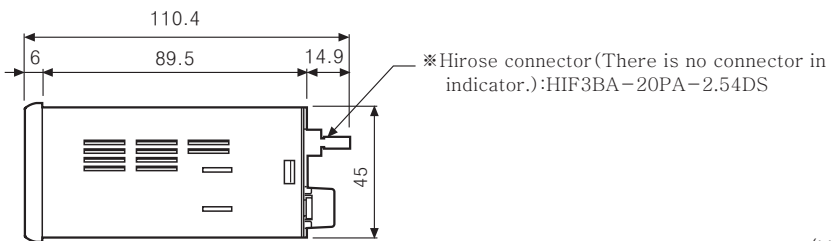


(K) Photo electric sensor  
(L) Pressure sensor

### ●MP5M Series

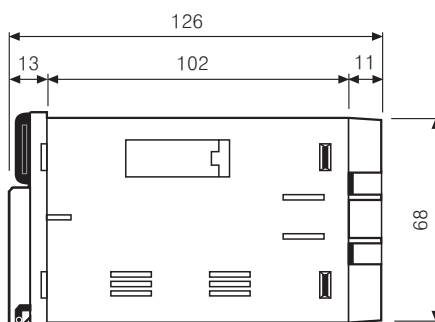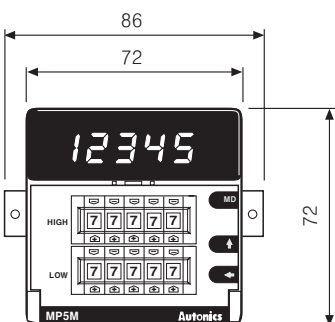

### ●Panel cut-out

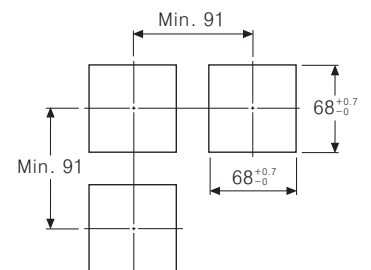

(Unit:mm)

(M) Rotary encoder  
(N) Stepping motor & Driver & Controller  
(O) Graphic panel  
(P) Production stoppage models & replacement


# MP5S/MP5Y/MP5W/MP5M Series

## Input specifications

### Input signal

#### Solid-state input

- Input frequency : **50kHz Max.**  
Standard duty ratio of input signal is 1:1,  
ON/OFF pulse width should be over 10 $\mu$ s.
- Input voltage Level : High  $\rightarrow$  4.5–24VDC, Low  $\rightarrow$  0–1.0VDC

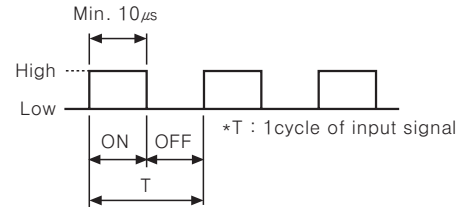


#### Relay contact input

- Input frequency : **45Hz Max.**  
ON/OFF pulse width should be over 11ms.
- Relay contact specification : Please use a relay contact that can carry the load current (min. 12VDC 2mA).


### Input type

MP5 has NPN input and PNP input and it is able to select in Parameter group 1.

#### When it is NPN input type

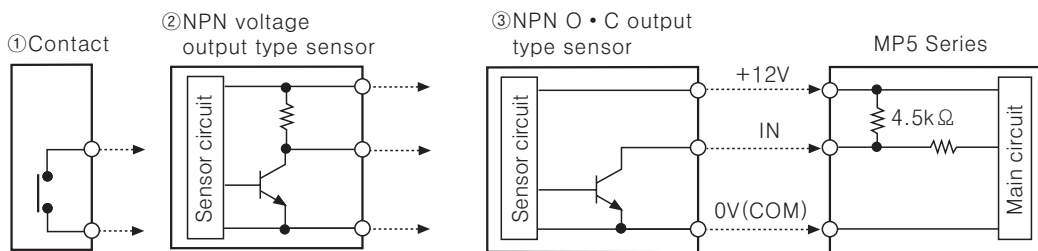

#### When it is PNP input type

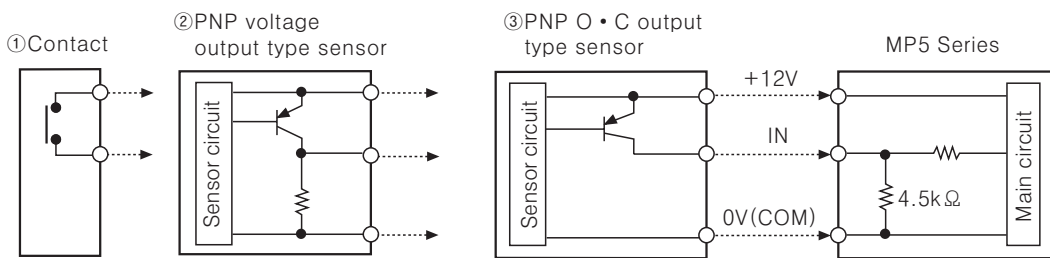

\*O·C is Open collector output.

## Output specifications(MP5Y/ MP5W Series)


### BCD Dynamic output(Negative logic)

- Output : Display value
- Output signal :  
BCD Data(A, B, C, D, DOT)  $\leftarrow$  A : Lowest bit  
Dot : Highest bit  
Digit Data(D0, D1, D2, D3, D4)  $\leftarrow$  D0 : Lowest digit  
D4 : Highest digit

**\*There is no DOT data output in MP5Y-43, therefore decimal point should be mark in first display plate.**

- Output type : NPN Open collector
- Rated load voltage : 12–24VDC
- Max. load current : 30mA (MP5Y)/ 20mA (MP5W)


Ex) When BCD Dynamic output is 125.89

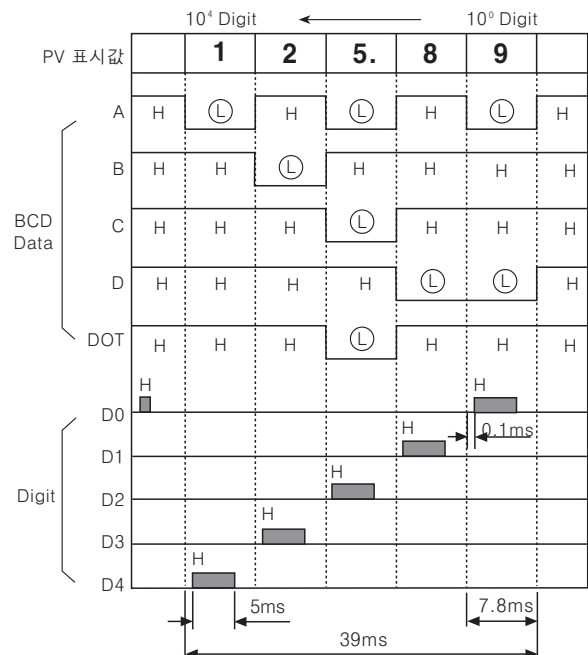


# Pulse(Rate) Meter

## ◎Low speed serial output(Negative logic)

- Output : Display value
- Output signal : Clock, Data, Latch
- Clock cycle : 50Hz
- Output CLK bit : 25 bit
- Output Data bit : 25 bit
- Output form : NPN Open Collector
- Rated load voltage : 12-24VDC
- Max. load current : 30mA(MP5Y)/ 20mA(MP5W)
- Serial transmission time diagram

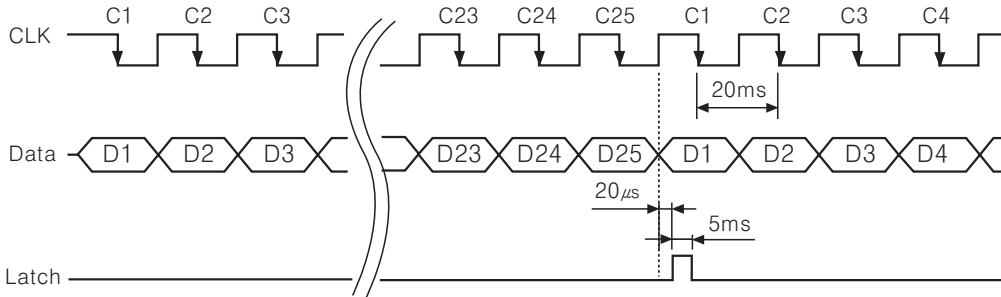


- Data output order when it is serial transmission

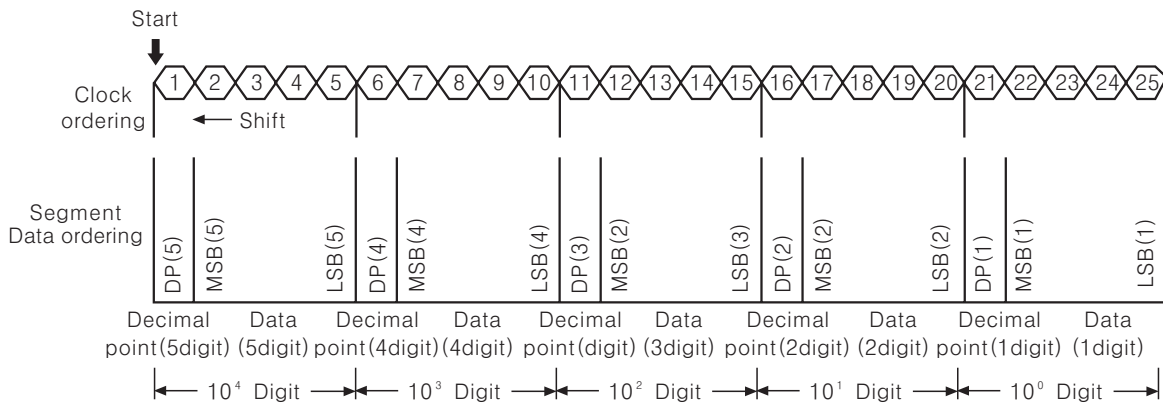

## ◎PV transmission output(DC4-20mA)

- Application : Transmit the measured value
- Function : This function is to transmit DC4-20mA converted from measured display value between High limit output (FS-H) and Low limit (FS-L).
- Range of High/Low limit output setting
- High limit setting range (FS-H)  
From min. to max within range of measurement
- Low limit setting range (FS-L)  
From min. to max within range of measurement
- Load resistance : Max. 600Ω
- Resolution : 8000 division

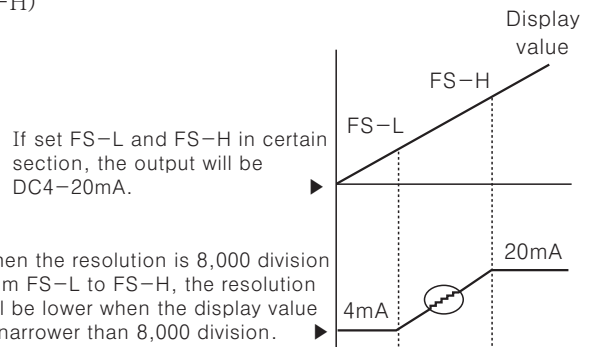

## ◎RS485 communication output

- Address : 0 ~ 99 address
  - Transmission speed(Baud rate) : 2400/4800/9600 bps
  - Transmission code : ASCII
  - Parity Bit : No
  - Data Bit : 8 Bit
  - Stop Bit : 1 Bit
  - Communication items  
MP5W ← PC : Comparative value of each bank data, Prescale value and Peak value, RESET control  
MP5W → PC : Comparative value of each bank data, Prescale value and Peak value, Display value
- ※Refer to F-26 for communication data.

(A)	Counter
(B)	Timer
(C)	Temp. controller
(D)	Power controller
(E)	Panel meter
(F)	Tacho/ Speed/ Pulse meter
(G)	Display unit
(H)	Sensor controller
(I)	Switching power supply
(J)	Proximity sensor
(K)	Photo electric sensor
(L)	Pressure sensor
(M)	Rotary encoder
(N)	Stepping motor & Driver & Controller
(O)	Graphic panel
(P)	Production stoppage models & replacement



# MP5S/MP5Y/MP5W/MP5M Series

## Parameter group chart for operation mode

- Parameter display are different according to each operation mode, refer to "Parameter" part.
- "○": When select the operation mode, the parameter will be displayed.
- "X": When select the operation mode, the parameter will not be displayed.
- "◎": It is only able to set  $nPn.h.F$  or  $PnP.h.F$  for  $ln-b$  sensor type in F11, F12, F13 of operation mode.

Parameter display		F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12	F13
Parameter group 0	$PSt.hh$	○	○	○	○	○	○	○	○	○	○	○	○	○
	$PSt.h$	○	○	○	○	○	○	○	○	○	○	○	○	○
	$PSt.L$	○	○	○	○	○	○	○	○	○	○	○	○	○
	$PSt.LL$	○	○	○	○	○	○	○	○	○	○	○	○	○
	$h.PEY$	○	○	○	○	○	○	○	○	○	○	○	○	X
	$L.PEY$	○	○	○	○	○	○	○	○	○	○	○	○	X
Parameter group 1	$nodE$	○	○	○	○	○	○	○	○	○	○	○	○	○
	$ln-R$	○	○	○	○	○	○	○	○	○	○	○	○	○
	$ln-b$	X	○	X	X	X	○	○	○	○	○	◎	◎	◎
	$out-t$	○	○	○	○	○	○	○	○	○	○	○	○	X
	$hYS$	○	X	X	X	X	X	○	○	○	○	X	X	X
	$GUr.d \leftrightarrow F.dEFY$	○	○	○	○	○	○	○	○	○	○	○	○	X
	$GUr.d \leftrightarrow StAr.t$	○	○	○	○	○	○	○	○	○	○	○	○	X
	$Ruto.R$	○	X	X	○	X	X	○	○	○	○	X	X	X
	$Ruto.b$	X	X	X	X	X	X	○	○	○	○	X	X	X
$nEno$	X	X	X	X	X	X	X	X	X	X	X	X	○	
Parameter group 2	$P.bAnY$	○	○	○	○	○	○	○	○	○	○	○	○	○
	$dot$	○	○	X	X	X	X	○	○	○	○	○	○	○
	$t.vnt$	X	X	○	○	○	○	X	X	X	X	X	X	X
	$PSt.hh$	○	○	○	○	○	○	○	○	○	○	○	○	○
	$PSt.h$	○	○	○	○	○	○	○	○	○	○	○	○	○
	$PSt.L$	○	○	○	○	○	○	○	○	○	○	○	○	○
	$PSt.LL$	○	○	○	○	○	○	○	○	○	○	○	○	○
	$PSC.RH$	○	○	X	○	X	X	○	○	○	○	○	○	○
	$PSC.RY$	○	○	X	○	X	X	○	○	○	○	○	○	○
	$PSC.bH$	X	X	X	X	X	X	○	○	○	○	X	X	X
	$PSC.bY$	X	X	X	X	X	X	○	○	○	○	X	X	X
	$dI SPt$	○	X	X	X	X	X	○	○	○	○	X	X	X
Parameter group 3	$FS-h$	When it is PV transmission output, it operates in all mode.												
	$FS-L$	When it is PV transmission output, it operates in all mode.												
	$Addr$	When it is RS485 communication output, it operates in all mode.												
	$bPS$	When it is RS485 communication output, it operates in all mode.												
	$rEnot$	When it is RS485 communication output, it operates in all mode.												
	$LoC$	○	○	○	○	○	○	○	○	○	○	○	○	○

## Operation mode by each series

Operation mode	Frequency Rotation Speed	Passing speed	Period	Passing time	Time width	Time interval	Absolute ratio	Error ratio	Density	Error	Length measurement	Interval	Multiplication
MP5S/MP5Y/MP5W	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12	F13
MP5M	F1	F2	F3	F4	F5	F6	F7	X	F8	X	F9	F10	F11

# Pulse(Rate) Meter

## Parameter group chart for model

- The parameter has different mode according to each model, therefore refer to "Parameter group chart of operation mode" and "Parameter".
- ○ : When selecting the operation mode, the parameter will be displayed.
- X : When selecting the operation mode, the parameter will not be displayed.

Model		MP5S-4N MP5Y-4N MP5M-4N	MP5Y-41 MP5Y-42	MP5Y-43	MP5Y-44	MP5Y-45	MP5W-41	MP5W-4A MP5W-42 MP5W-43	MP5W-44 MP5W-45	MP5W-46 MP5W-47	MP5W-48 MP5W-49	MP5M-41	MP5M-42
Parameter group 0	<i>PSt.hh</i>	X	○	X	X	X	X	○	○	○	○	X	X
	<i>PSt.h</i>	X	○	X	X	X	○	○	○	○	○	X	X
	<i>PSt.L</i>	X	○	X	X	X	○	○	○	○	○	X	X
	<i>PSt.LL</i>	X	○	X	X	X	X	○	○	○	○	X	X
	<i>h.PEY</i>	○	○	○	○	○	○	○	○	○	○	○	○
	<i>L.PEY</i>	○	○	○	○	○	○	○	○	○	○	○	○
Parameter group 1	<i>nodE</i>	○	○	○	○	○	○	○	○	○	○	○	○
	<i>ln-A</i>	○	○	○	○	○	○	○	○	○	○	○	○
	<i>ln-b</i>	○	○	○	○	○	○	○	○	○	○	○	○
	<i>out-t</i>	X	○	X	X	X	○	○	○	○	○	X	○
	<i>hYS</i>	X	○	X	X	X	○	○	○	○	○	○	○
	<i>GuAr.d ↔ F.dEFY</i>	X	○	X	X	X	○	○	○	○	○	X	○
	<i>GuAr.d ↔ StAr.t</i>	X	○	X	X	X	○	○	○	○	○	X	○
	<i>Auto.A</i>	○	○	○	○	○	○	○	○	○	○	○	○
	<i>Auto.b</i>	○	○	○	○	○	○	○	○	○	○	○	○
<i>ñEño</i>	○	○	○	○	○	○	○	○	○	○	○	○	
Parameter group 2	<i>P.bAnY</i>	○	X	X	X	X	○	○	○	○	○	X	X
	<i>dot</i>	○	○	○	○	○	○	○	○	○	○	○	○
	<i>t.vnt</i>	○	○	○	○	○	○	○	○	○	○	○	○
	<i>PSt.hh</i>	X	○	X	X	X	X	○	○	○	○	X	X
	<i>PSt.h</i>	X	○	X	X	X	○	○	○	○	○	X	X
	<i>PSt.L</i>	X	○	X	X	X	○	○	○	○	○	X	X
	<i>PSt.LL</i>	X	○	X	X	X	X	○	○	○	○	X	X
	<i>PSC.AH</i>	○	○	○	○	○	○	○	○	○	○	○	○
	<i>PSC.AY</i>	○	○	○	○	○	○	○	○	○	○	○	○
	<i>PSC.bH</i>	○	○	○	○	○	○	○	○	○	○	○	○
	<i>PSC.bY</i>	○	○	○	○	○	○	○	○	○	○	○	○
<i>diSPt</i>	○	○	○	○	○	○	○	○	○	○	○	○	
Parameter group 3	<i>F5-h</i>	X	X	X	○	X	X	X	○	X	X	X	X
	<i>F5-L</i>	X	X	X	○	X	X	X	○	X	X	X	X
	<i>Addr</i>	X	X	X	X	○	X	X	X	X	○	X	X
	<i>bPS</i>	X	X	X	X	○	X	X	X	X	○	X	X
	<i>rEñot</i>	X	X	X	X	○	X	X	X	X	○	X	X
	<i>LoC</i>	○	○	○	○	○	○	○	○	○	○	○	○

※   : Data bank (*P.bAnY*) setting is available in only MP5W-4N.

## Monitoring delay operation function chart by each output mode

<i>out-t</i>	<i>StAr.d</i>	<i>out-h</i>	<i>out-L</i>	<i>out-b</i>	<i>out-i</i>	<i>out-F</i>
Comparative output limit function	○	X	X	○	X	○
Starting correction timer function	○	○	○	○	○	○

(A) Counter

(B) Timer

(C) Temp. controller

(D) Power controller

(E) Panel meter

(F) Tacho/Speed/Pulse meter

(G) Display unit

(H) Sensor controller

(I) Switching power supply

(J) Proximity sensor

(K) Photo electric sensor

(L) Pressure sensor

(M) Rotary encoder

(N) Stepping motor & Driver & Controller


(O) Graphic panel

(P) Production stoppage models & replacement

# MP5S/MP5Y/MP5W/MP5M Series

## Parameter

### Parameter group 0

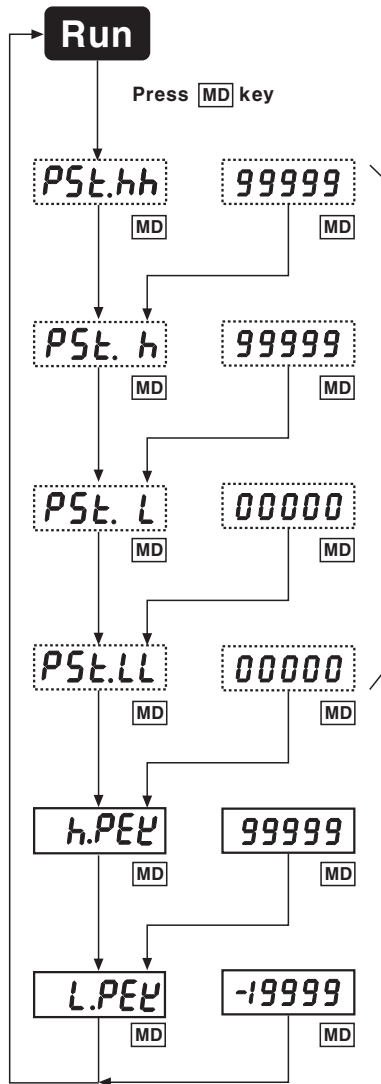

If **[MD]** key is pressed in **RUN** mode, it will advance to Parameter group 0.

Set HH comparative value. Refer to the "Setting range of comparative value by operation mode" for a setting range.

(**[Left]** : Shift the setting digit **[Down]**, **[Up]** : Change the setting value)

Set H comparative value.

(**[Left]** : Shift the setting digit **[Down]**, **[Up]** : Change the setting value)

(★1)

(**[Left]** : Shift the setting digit **[Down]**, **[Up]** : Change the setting value)

(**[Left]** : Shift the setting digit **[Down]**, **[Up]** : Change the setting value)

Display High Peak value among measuring values.

If **[Left]** key is pressed for 2 sec, The Peak value will be reset and it displays a current measuring value

Display Low Peak value among measuring values.

If **[Left]** key is pressed for 2 sec, The Peak value will be reset and it displays a current measuring value

#### Setting range of comparative value by operation mode

Operation mode	Setting range
F1, F2, F7, F9, F11, F12, F13	0 ~ 99999
F3, F4, F5, F6, F8, F10	0 ~ Setting time range -19999 ~ 99999

\*The setting range is changed by setting position of decimal point.

※If **[MD]** key is pressed in **RUN** mode, it will advance to Parameter group 0.

※When advance to Parameter group 0, parameter and set data value is flashed as 1 sec. cycle.


※(★1) • The parameter shown in dotted line is displayed only for comparative value setting type.

• If F mode is selected among output modes, it is to set H and L deviation only, therefore **[PSE.hh]** and **[PSE.LL]** parameter will not appear.

※After setting value in each parameter is changed, data will be saved by press **[MD]** key for 2sec and return to **RUN** mode, but if any keys are untouched for 60sec while changing data, it will return to **RUN** mode with previous set value.

• If it is not comparing value setting type, **[h.PEY]** will appear when advance to parameter group 0.

## ●Parameter group 1

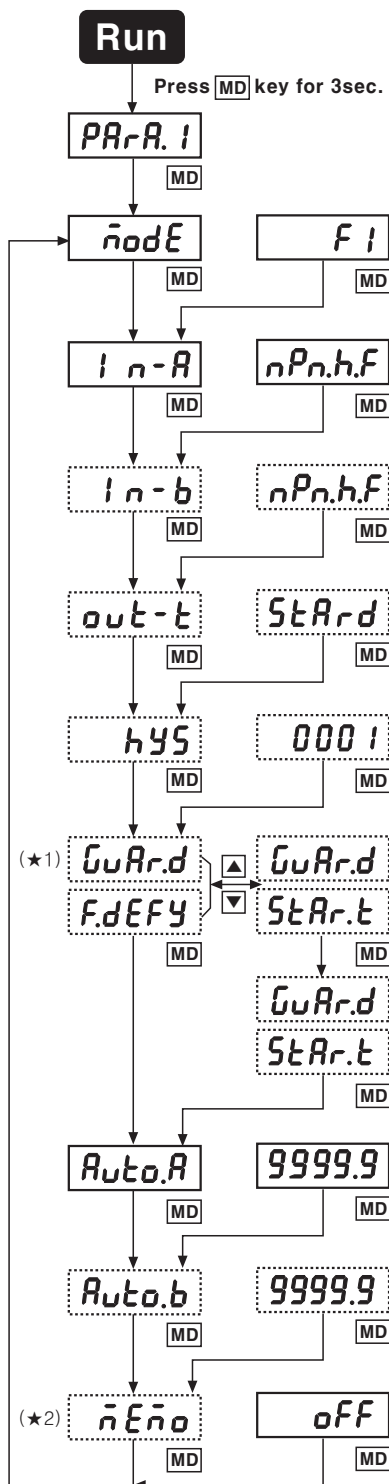

This is parameter group 1.  
Display **PAR.A.1** for 2 sec and move to **nodE**.

Select operation mode.  
→ **F1** → **F2** → **F3** ~ **F13** ]  
( **▼** , **▲** : Change the operation mode)

Set the sensor type of input A.  
→ **nPN.h.F** → **nPN.L.F** → **PnPN.h.F** → **PnPN.L.F** ]  
( **▼** , **▲** : Change the)

Set the sensor type of input B.  
→ **nPN.h.F** → **nPN.L.F** → **PnPN.h.F** → **PnPN.L.F** ]  
( **▼** , **▲** : Change the sensor type)

Select the output mode.  
→ **StAr.d** → **out-h** → **out-L** → **out-b** → **out-I** → **out-F** ]  
( **▼** , **▲** : Change the output mode)

Set the hysteresis for the output .  
Setting range : **0** ~ **9999** (The hysteresis range differs by the setting position of decimal point. See F-25 page)  
( **▼** , **▲** : Change the setting value)

(★1) Starting protection timer function(**StAr.t**) or comparative output(L, LL) limit function(**FdEFY**)  
→ **FdEFY** → **StAr.t** ]  
( **▼** , **▲** : Change the setting value)

Set the protection time when it is a starting protection timer function(**StAr.t**).  
setting range : **0.0** ~ **99.9** sec  
( **◀** : Move the digit **▼** , **▲** : Change the setting value)

Set the Auto-Zero time of INA input.  
Setting range : **0.1** ~ **9999.9** sec  
( **◀** : Move the digit **▼** , **▲** : Change the setting value)

Set the Auto-Zero time of INB input.  
Setting range : **0.1** ~ **9999.9** sec  
( **◀** : Move the digit **▼** , **▲** : Change the setting value)

It sets the memory protection.  
→ **off** → **on** ] ( **off** : Enable of memory protection,  
**on** : Disble of memory protection)  
( **▼** , **▲** : Change the setting value)

### ●Input sensor


NPN input type	
• Transistor input :	<b>nPN.h.F</b>
• Contact input :	<b>nPN.L.F</b>
PNP input type	
• Transistor input :	<b>PnPN.h.F</b>
• Contact input :	<b>PnPN.L.F</b>

- ※ If **MD** key is pressed for 3 sec. in **RUN** mode, it will advance to Parameter group 1.
- ※ When advance to Parameter group 1, parameter and set data value flash as 1 sec. cycle.
- ※ The parameter shown in dotted line is not displayed by operating mode.  
(Refer to F-13, "Parameter group chart for operation mode".)
- ※ (★1) The parameter is displayed in case of comparative value setting type only.  
(Except for indicator and MP5M-41.)
- ※ (★2) The Selecting function of memory protection is displayed when the mode is F13(Multiplication mode).  
(But, F11 mode for MP5M-42)
- ※ After changing setting value in each Parameter, data will be saved by press **MD** key for 2sec and return to **RUN** mode, but if any keys are untouched for 60sec while changing data, it will return to **RUN** mode with previous set value.

- (A) Counter
- (B) Timer
- (C) Temp. controller
- (D) Power controller
- (E) Panel meter
- (F) Tacho/Speed/Pulse meter
- (G) Display unit
- (H) Sensor controller
- (I) Switching power supply
- (J) Proximity sensor
- (K) Photo electric sensor
- (L) Pressure sensor
- (M) Rotary encoder
- (N) Stepping motor & Driver & Controller
- (O) Graphic panel
- (P) Production stoppage models & replacement

# MP5S/MP5Y/MP5W/MP5M Series


## ●Parameter group 2

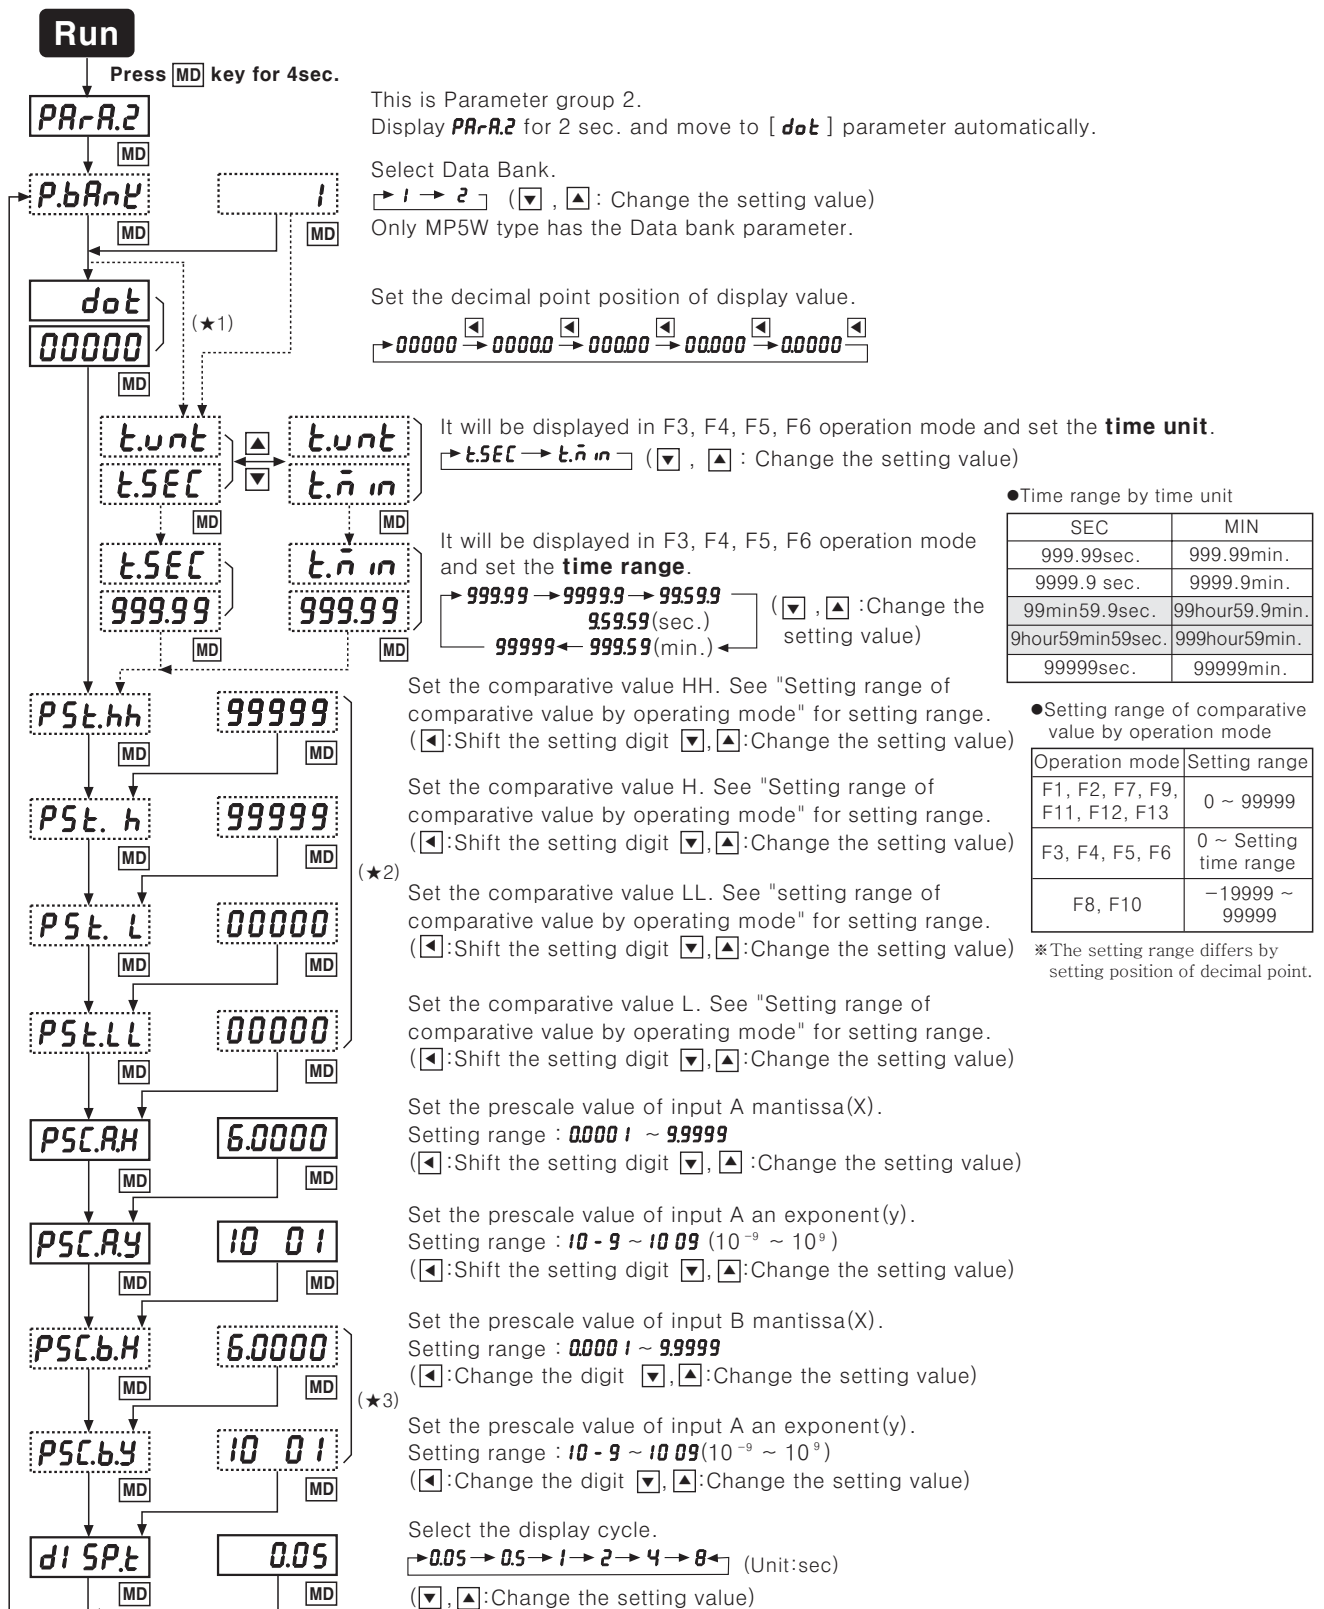

- \* If **MD** key is pressed for 4sec. in **RUN** mode, [ **PAR.A.1** ] will be displayed after [ **PAR.A.2** ]. If **MD** key is released, it is advance to Parameter group 2.
- \* When advance to Parameter group 2, parameter and set data value is flashed as 1sec cycle.
- \* (★1) It will be displayed only in F3, F4, F5, F6 modes.
- \* (★2) If F mode is selected among output modes, it is set H and L deviation only, therefore [ **PSt.hh** ] and [ **PSt.LL** ] parameter will not appear.
- \* (★3) It will be displayed only in F7, F8, F9, F10 modes. But in case of MP5M type, it is displayed only in F7, F8 modes.
- \* After setting value in each parameter is changed in each Parameters, if **MD** key is pressed for 2sec., data will be saved then return to **RUN**. If any keys are untouched for 60sec., previous data will be saved and return to **RUN**.

# Pulse(Rate) Meter

## ●Parameter group 3

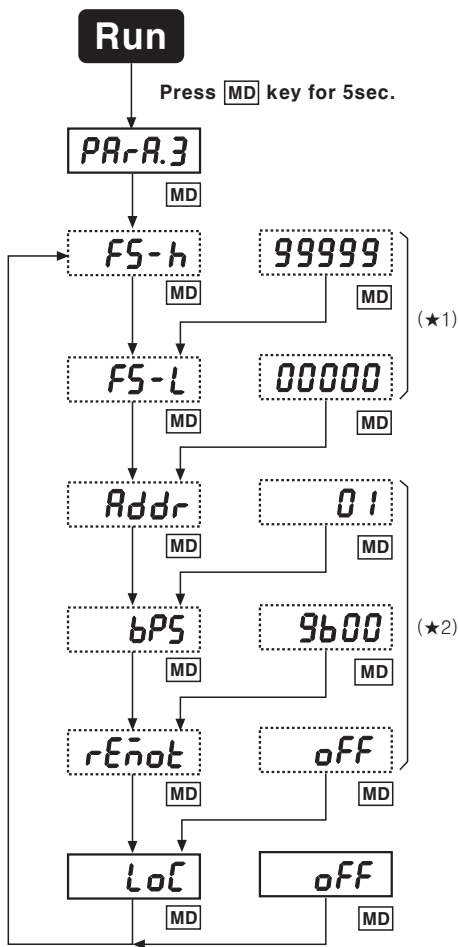

This is Parameter group 3.  
Display **PAR-A.3** for 2 sec. and move to [**FS-h**] parameter automatically.

Set the High-limit value of PV retransmission output.  
See "Setting range of comparative value by operating mode"  
for setting range  
():Shift the setting digit ,:Change the setting value)

Set the Low-limit value of PV retransmission output.  
():Shift the setting digit ,:Change the setting value)

Set the communication Address.  
setting range : **00 ~ 99**  
():Shift the setting digit  
,:Change the setting value)

Set the communication Speed.  
→ **9600** → **4800** → **2400** →  
():Shift the setting digit  
,:Change the setting value)

Select the Remote and the Local.  
→ **off** → **on** → ( **off** : Enable, **on** : Disable)  
():Shift the setting digit ,:Change the setting value)

Enable to lock the key for each parameter group  
→ **off** → **LoC.0** → **LoC.1** →  
**LoC.3** ← **LoC.2** ←  
(,:Change the setting value)

- off** : Lock cancel
- LoC.0** : P0 ~ 3 Lock
- LoC.1** : P1 ~ 3 Lock
- LoC.2** : P2 ~ 3 Lock
- LoC.3** : P3 Lock only

●Setting range of comparative value by operation mode

Operation mode	Setting range
F1, F2, F7, F9, F11, F12, F13	0 ~ 99999
F3, F4, F5, F6	0 ~ Setting time range
F8, F10	-19999 ~ 99999

\*The setting range differs by setting position of decimal point.

\*If  key is pressed for 5sec. in RUN mode, [**PAR-A.1**] and [**PAR-A.2**] will be displayed after [**PAR-A.3**].  
If  key is released, it is advance to Parameter group 3.

\*When it advances into Parameter group 3, parameter and data value is flashed as 1sec. cycle.

\* (★1) The parameter is displayed in case of PV transmission output type only.

\* (★2) The parameter is displayed in case of RS485 transmission output type only. When Remote [**rEnot**] is selected, it is not able to operate front keys.

\*After setting value in each parameter is changed, data will be saved by press  key for 2sec and return to **RUN** mode, but if any key is untouched for 60sec while changing data, it will return to **RUN** move with previous set value.

## ■Factory defaults

### ●Parameter 1 group

Mode	Setting value
<b>nodE</b>	<b>F1</b>
<b>in-A</b>	<b>nPnhF</b>
<b>out-t</b>	<b>StAr d</b>
<b>hYS</b>	<b>0001</b>
<b>GuAr.d</b>	<b>F.dEFY</b>
<b>AuLoA</b>	<b>99999</b>
<b>nEno</b>	<b>off</b>

### ●Parameter 2 group

Mode	Setting value
<b>PbAnE</b>	<b>1</b>
<b>dot</b>	<b>00000</b>
<b>PSt.hh</b>	<b>99999</b>
<b>PSt. h</b>	<b>99999</b>
<b>PSt. L</b>	<b>00000</b>
<b>PSt.LL</b>	<b>00000</b>
<b>PSCAH</b>	<b>6.000</b>
<b>PSCAY</b>	<b>10 01</b>
<b>dI SP.t</b>	<b>005</b>

### ●Parameter 3 group

Mode	Setting value
<b>FS-h</b>	<b>99999</b>
<b>FS-L</b>	<b>00000</b>
<b>Addr</b>	<b>01</b>
<b>bPS</b>	<b>9600</b>
<b>rEnot</b>	<b>off</b>
<b>LoC</b>	<b>off</b>

\*Setting specification may not be displayed because of operation mode or output specification.

(A) Counter

(B) Timer

(C) Temp. controller

(D) Power controller

(E) Panel meter

(F) Tacho/Speed/Pulse meter

(G) Display unit

(H) Sensor controller

(I) Switching power supply

(J) Proximity sensor

(K) Photo electric sensor

(L) Pressure sensor

(M) Rotary encoder

(N) Stepping motor & Driver & Controller

(O) Graphic panel

(P) Production stoppage models & replacement

# MP5S/MP5Y/MP5W/MP5M Series

## Operation mode

- Select operation mode from  $\bar{n}odE$  (mode) of Parameter group 1.
- There are 13 kinds of operation mode in MP5S, MP5Y, MP5W.  
There are 11 kinds of operation mode in MP5M series.

### Mode F1 (Frequency/Number of revolution/Speed)

This mode is to display calculated frequency or number of revolution or speed by measuring frequency of Input A.

1) **Frequency(Hz) =  $f \times \alpha$**  [ $\alpha = 1(\text{sec})$ ]

2) **Number of revolution(rpm) =  $f \times \alpha$**  [ $\alpha = 60(\text{sec})$ ]

Several targets  $\alpha = 60 \times \frac{1}{N}$

3) **Speed(m/min) =  $f \times \alpha$**  [ $\alpha = 60 \times L(\text{m})$ ]

Several targets  $\alpha = 60 \times \frac{\pi D}{1000N}$

※ L : The length of conveyor moved for 1 pulse cycle [m]

N : Sensing target per 1 pulse



$\alpha$  : Prescale value

#### Display value and display unit

Display value	Display unit	$\alpha$ (Prescale value)
Frequency	Hz	1
	kHz	0.001
Number of revolution	RPS	1
	rpm	60
Speed	mm / sec	1,000L
	cm / sec	100L
	m / sec	L
	m / min	60L
	km / hour	3.6L

※ Display unit of default: rpm

#### Time chart

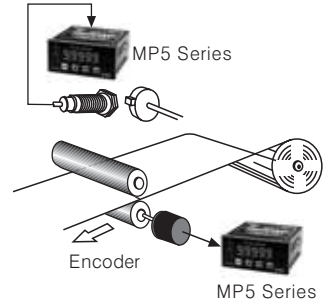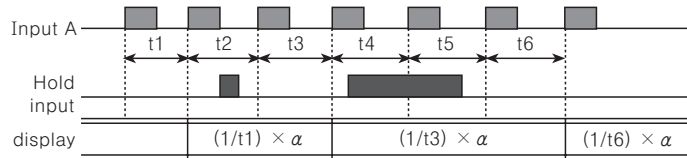

### Mode F2 (Passing speed)

Display the passing speed between ON of input A and ON of input B.

**Passing speed(V) =  $f \times \alpha$**  [ $\alpha = L(\text{m})$ ]

※ f : This is reciprocal number of the time between ON of input A and ON of input B.

L : The distance between input A and input B [m]


$\alpha$  : Prescale value

#### Display value and display unit


Display value	Display unit	$\alpha$ (Prescale value)
Passing speed	mm / sec	1,000L
	cm / sec	100L
	m / sec	L
	m / min	60L
	km / hour	3.6L

※ Display unit of factory default: m/sec

#### Time chart

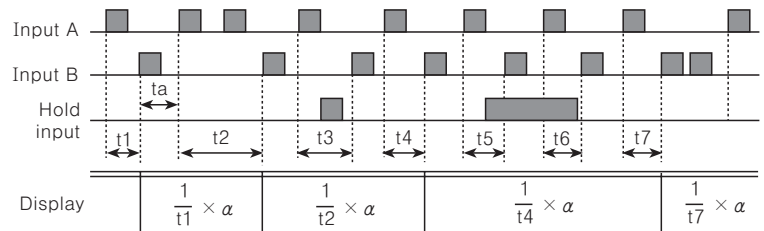

ta : It requires min. 20ms for return time

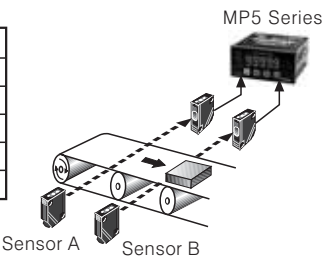

### Mode F3 (Cycle)

Display the time from when input A is ON to the next ON.

**Cycle(T) = t**

※ t : Measurement time [sec]


#### Display value and display unit

Display value	Display unit	
	SEC	MIN
	999.99sec.	999.99min.
	9999.9sec.	9999.9min.
	99min. 59.9sec.	99hour 59.9min.
	9hour 59min. 59sec.	999hour 59min.
99999sec.	99999min.	


※ Set the display unit at the  $\bar{L}unt$  (Time unit) of Parameter 2.

※ Display unit of factory default: 999.99sec.

#### Time chart

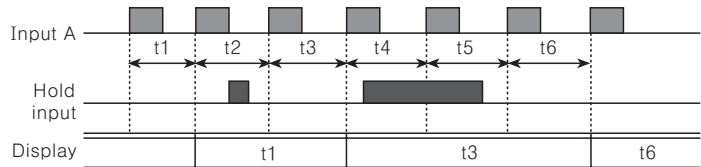

ta : It requires min. 20ms for return time

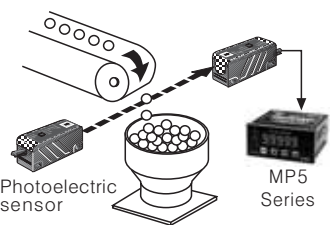

※ [ ] is not displayed in MP5M-4N, MP5M-41, MP5M-42.

# Pulse(Rate) Meter

## ●Mode F4(Passing time)

It displays the pass time of certain distance to measure the time between ON and the next ON of Input A.


$$\text{Passing time(sec)} = t \times \alpha$$

$$\left[ \alpha = \frac{L(\text{m})}{\text{Moving distance within 1pulse cycle}[\text{m}]} \right]$$

※ t : Measurement time[sec]


L : Certain distance[m]

※ α : Presale value

※  is not displayed in MP5M-4N, MP5M-41, MP5M-42.


## ●Display value and display unit

Display value	Display unit	
	SEC	MIN
Passing time	999.99sec.	999.99min.
	9999.9sec.	9999.9min.
	99min. 59.9sec.	99hour 59.9min.
	9hour 59min. 59sec.	999hour 59min.
	99999sec.	99999min.

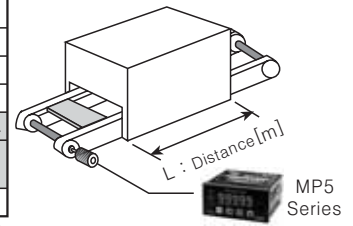

※ Set the display unit at the **t.unT**(Time unit) of Parameter 2.  
 ※ Display unit of factory default:999.99sec.

## ●Time chart

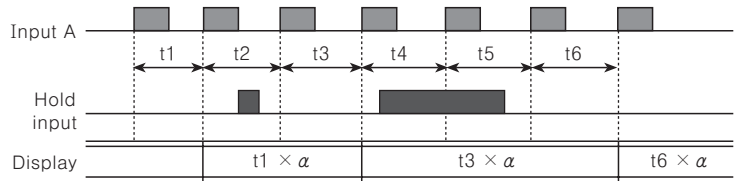


- (A) Counter
- (B) Timer
- (C) Temp. controller
- (D) Power controller
- (E) Panel meter

## ●Mode F5(Time width)

It displays the ON time of input A.


$$\text{Time width(T)} = t$$

※ t : ON measurement time of input A[sec]

※  is not displayed in MP5M-4N, MP5M-41, MP5M-42.


## ●Display value and display unit

Display value	Display unit	
	SEC	MIN
Time width	999.99sec.	999.99min.
	9999.9sec.	9999.9min.
	99min. 59.9sec.	99hour 59.9min.
	9hour 59min. 59sec.	999hour 59min.
	99999sec.	99999min.

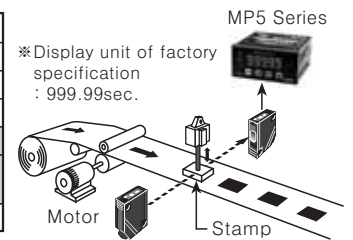

※ Set the display unit at the **t.unT**(Time unit) of Parameter 2.  
 ※ Display unit of factory default:999.99sec.

## ●Time chart

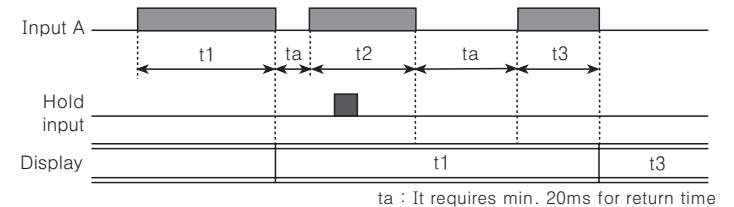

ta : It requires min. 20ms for return time

- (F) Tacho/Speed/Pulse meter
- (G) Display unit
- (H) Sensor controller
- (I) Switching power supply
- (J) Proximity sensor

## ●Mode F6(Time interval)


It displays the time from input A is ON to input B is ON.

$$\text{Time difference(T)} = t(\text{Ta} \sim \text{Tb})$$

※ t(Ta ~ Tb) : The measured time from input A is ON to input B is ON[sec]


## ●Display value and display unit

Display value	Display unit	
	SEC	MIN
Time interval	999.99sec.	999.99min.
	9999.9sec.	9999.9min.
	99min. 59.9sec.	99hour 59.9min.
	9hour 59min. 59sec.	999hour 59min.
	99999sec.	99999min.

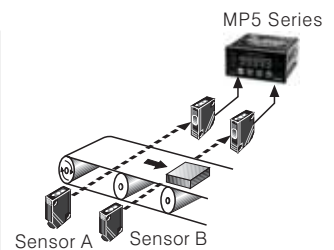


※ Set the display unit at the **t.unT**(Time unit) of Parameter 2.  
 ※ Display unit of factory default:999.99sec.

## ●Time chart

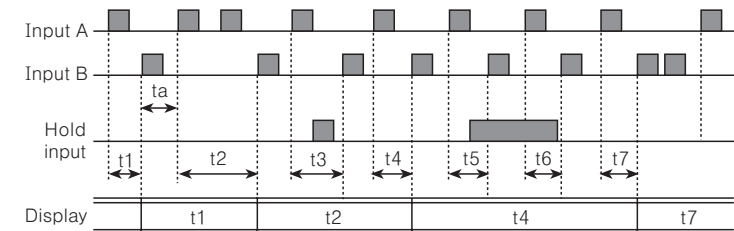

ta : It requires min. 20ms for return time

※  is not displayed in MP5M-4N, MP5M-41, MP5M-42.

- (K) Photo electric sensor
- (L) Pressure sensor
- (M) Rotary encoder
- (N) Stepping motor & Driver & Controller
- (O) Graphic panel
- (P) Production stoppage models & replacement



# MP5S/MP5Y/MP5W/MP5M Series

## ●Mode F7(Absolute ratio)

It displays how fast or late as a percentage speed, value etc. of input B against input A.

$$\text{Absolute ratio} = (\text{Input B} / \text{Input A}) \times 100\%$$



$$\text{Absolute ratio} = \frac{\text{Frequency of input B[Hz]} \times B\alpha}{\text{Frequency of input A[Hz]} \times A\alpha} \times 100[\%]$$

※ A α : Prescale value of input A  
B α : Prescale value of input A

## ●Display value and display unit

Display value	Display unit
Absolute ratio	%

## ●Time chart

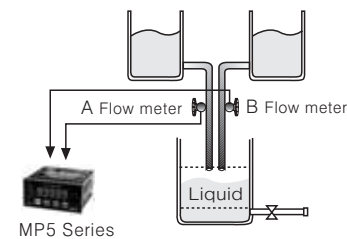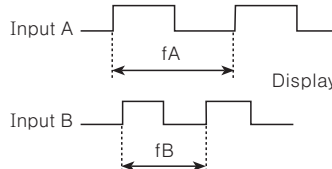

※Hold : Hold signal is ON, the display value will be held until Hold signal is OFF.

## ●Mode F8(Error ratio)

It displays how fast or late as a percentage(%) for input B against input A.

$$\text{Error ratio} = \frac{\text{Input B} - \text{Input A}}{\text{Input A}} \times 100[\%]$$

$$\text{Error ratio} = \frac{(\text{Frequency of input B[Hz]} \times B\alpha) - (\text{Frequency of input A[Hz]} \times A\alpha)}{\text{Frequency of input A[Hz]} \times A\alpha} \times 100[\%]$$



※There is no error ratio mode in MP5M-4N, MP5M-41, MP5M-42 models.

## ●Display value and display unit

Display value	Display unit
Error ratio	%

※ A α : Prescale value of input A  
B α : Prescale value of input B

## ●Time chart

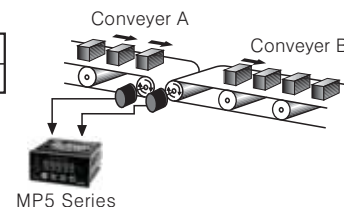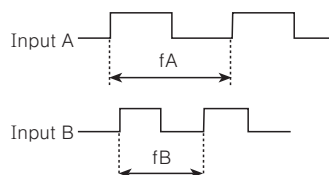

※Hold : Hold signal is ON, the display value will be held until Hold signal is OFF.

## ●Mode F9(Density)

It displays the density ratio of input B against total sum of input A and input B.

$$\text{Density} = \frac{\text{Input B}}{\text{Input A} + \text{Input B}} \times 100[\%]$$



$$\text{Density} = \frac{\text{Frequency of input B[Hz]} \times B\alpha}{(\text{Frequency of input A[Hz]} \times A\alpha) + (\text{Frequency of input B[Hz]} \times B\alpha)} \times 100[\%]$$

## ●Display value and display unit

Display value	Display unit
Density	%

※ A α : Prescale value of input A  
B α : Prescale value of input B

## ●Time chart

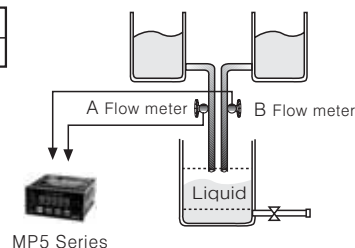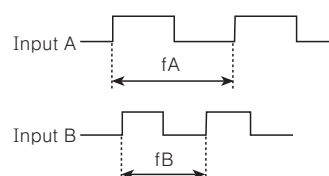

※Hold : Hold signal is ON, the display value will be held until Hold signal is OFF.

※F8 mode is applied to MP5M-4N, MP5M-41, MP5M-42 models.

# Pulse(Rate) Meter

## ●Mode F10(Error)

It displays the error between standard input A and comparing input B.

$$\text{Error} = \text{Input B} - \text{Input A}$$

$$\text{Error} = (\text{Frequency of input B[Hz]} \times B\alpha) - (\text{Frequency of input A[Hz]} \times A\alpha)$$

※There is no error mode in MP5M-4N, MP5M-41, MP5M-42 models.

## ●Display value and display unit


Display value	Display unit
Error	END User setting unit

※Aα: Prescale value of input A  
Bα: Prescale value of input B

## ●Time chart



※Hold: Hold signal is ON, the display value will be held until Hold signal is OFF.

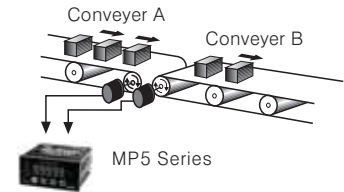

## ●Mode F11(Length measurement)

It displays the number of input A pulse while input B is ON.

$$\text{Length measurement} = P \times \alpha$$


※P: Number of input A pulse,  
α: Prescale value

## ●Display value and display unit


Display value	Display unit
	Quantity[EA]
	mm
	cm
	m

※Factory default (Unit):Quantity [EA]

## ●Time chart

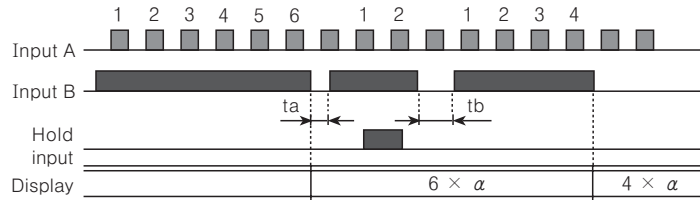

※ta, tb: It requires min. 20ms for return time

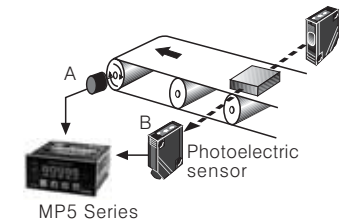

※F9 mode is applied to MP5M-4N, MP5M-41, MP5M-42 models.

## ●Mode F12(Interval)

It displays the number of input A pulse from input B is ON to the time input B is ON next.

$$\text{Interval} = P \times \alpha$$


※P: Number of input A pulse,  
α: Prescale value

## ●Display value and display unit


Display value	Display unit
	Quantity[EA]
	mm
	cm
	m

※Factory default (Unit):Quantity [EA]

## ●Time chart

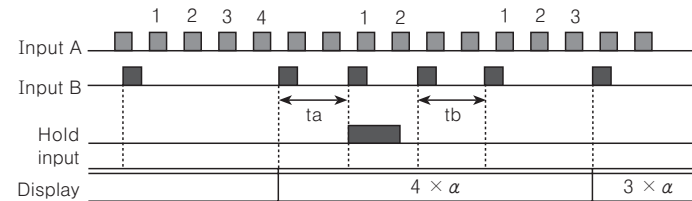

※ta: It requires min. 20ms for return time

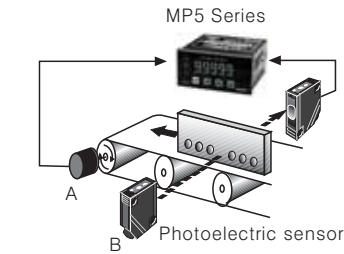

※F10 mode is applied to MP5M-4N, MP5M-41, MP5M-42 models.

## ●Mode F13(Multiplication)

It displays the counting value against pulses of input A.

$$\text{Integration} = P \times \alpha$$

※P: Pulse number of input A,  
α: Prescale value

※Max. counting speed: 50kcps  
(same with max. response frequency)


※F11 mode is applied to MP5M-4N, MP5M-41, MP5M-42 models.

## ●Display value and display unit


Display value	Display unit
Multiplication	Quantity[EA]

## ●Operation and Time chart

- It counts the number of Input pulse, A.
- Input B is an Enable input signal, when this is ON, it stops the display value and counting of Input A, when it is ON and it counts Input A again when it is OFF.

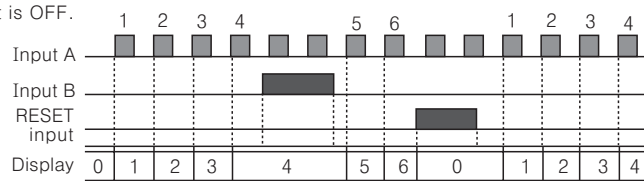

※α=1 display value

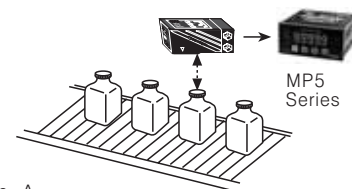

(A) Counter

(B) Timer

(C) Temp. controller

(D) Power controller

(E) Panel meter

(F) Tacho/Speed/Pulse meter

(G) Display unit

(H) Sensor controller

(I) Switching power supply

(J) Proximity sensor

(K) Photo electric sensor

(L) Pressure sensor

(M) Rotary encoder

(N) Stepping motor & Driver & Controller

(O) Graphic panel


(P) Production stoppage models & replacement

# MP5S/MP5Y/MP5W/MP5M Series


## Output mode

- Select output mode in **out-t**(output type) of Parameter group 1.
- MP5 series are 6 kinds of output mode. There is no output mode in indicator type, MP5Y-43/44/45, MP5M-41 models.
  - S(Standard) output mode, H(High) output mode, L(Low) output mode, B(Block) output mode, I(One shot)output mode, F(Deviation)output mode.
- B output mode : In order to set comparative value, B output mode should be LL<L<H<HH, F output mode should be L<H, other S, H, L, I output modes operate individually, regardless of value size of comparative setting value. (There is no GO, HH, LL, OUTPUT in MP5M-42)


### S(Standard) output mode [out-s]

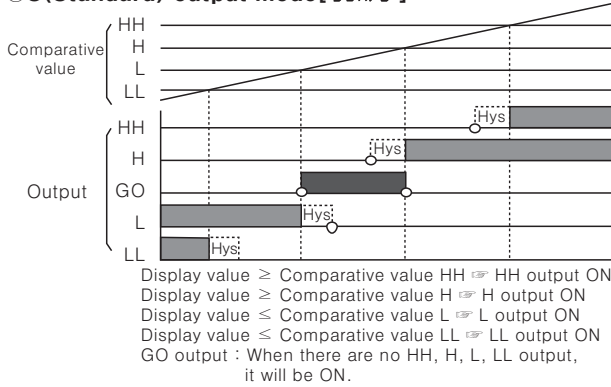

### I(One Shot) output mode [out-i]

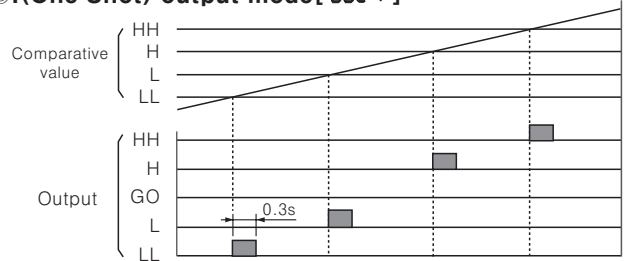

### H(High) output mode [out-h]

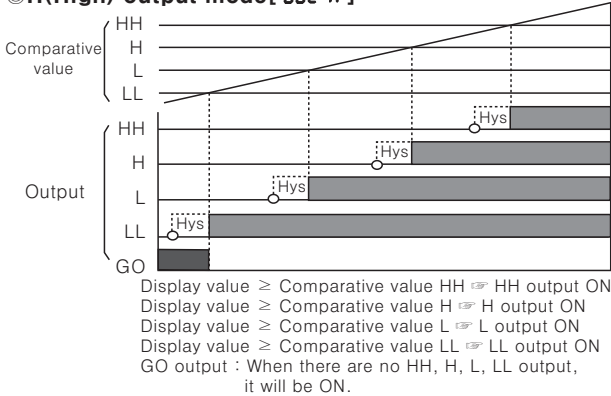


### F(Deflection) output mode [out-f]



This function is to memorize the setting value and it outputs when exceed the deviation of H, L.

- Memorize the setting value : Memorize the current display value as the setting value with pressing (M + ▲) key is front.
- Display the setting value : Check the memorized the setting value by (▲) key. (Display the memorized setting value for pressing ▲ key continuously.)
- Deviation setting : Set H [P5t. h], L [P5t. L] deviation by setting value. (The set deviation will be memorized until set the next deviation again when power off.)
- Deviation setting range : 0.0001 to 99999 (The setting range will be changed by decimal point setting parameter. If setting decimal point as 0000.0, the setting range will be 0.1 to 9999.9.)
- Operation : Display value  $\leq$  L Comparative value  $\Rightarrow$  L Comparative output ON,  
 Display value  $\geq$  H Comparative value  $\Rightarrow$  H Comparative output ON

### L(Low) output mode [out-l]

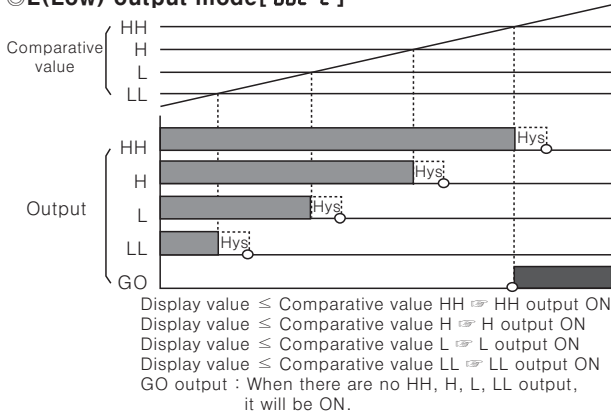

### B(Block) output mode [out-b]

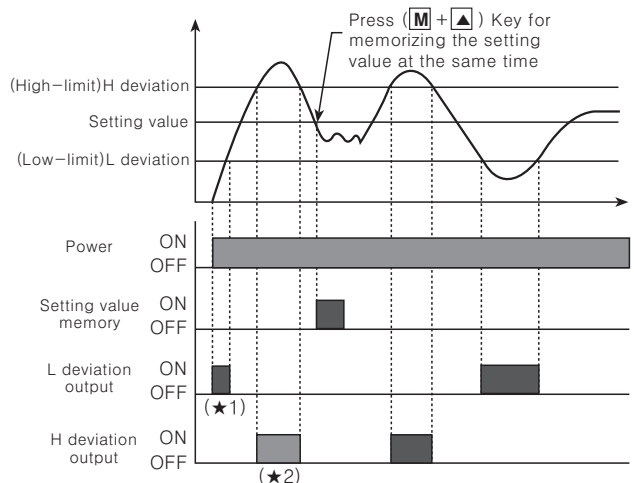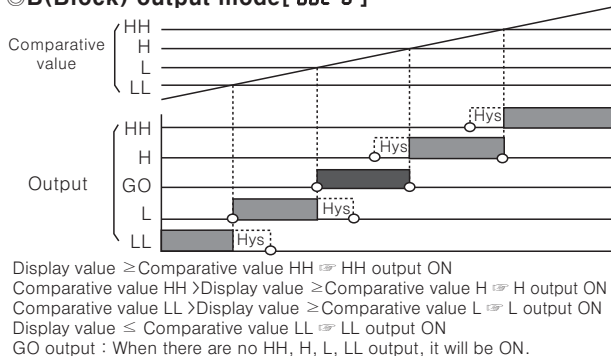


- (★1) When selecting the comparative output adjustment function, output will not be come.
- (★2) The output on the above is on the assumption that the prior setting value of memory can be available.
- \*There are no HH, GO, LL outputs in F output mode.
- \*Even though, set the deviation as "0(Zero)", it will work as "deviation 1".

## Function

### Selection of display interval

It measures and displays reciprocal number of measuring time to detect target. Measuring accuracy may be dropped because the measuring time of interval is short, if the target is revolving with high speed.


It is able to change the display cycle in range of 0.05/0.5/1/2/4/8sec.) and displays the average value of measuring value then able to maintain measuring accuracy when revolving with high speed. In case of preset output type, the response can be delayed when the measuring time is long. Therefore, please adjust the measuring time properly.

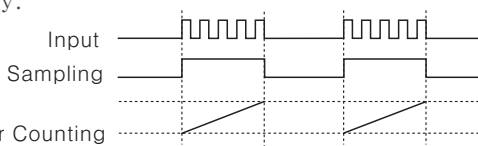

※Select display sampling period in parameter 2.

### Prescale function

This prescale function allows to multiply the number of pulse or pulse length by a variable ( $X \times 10^y$ ) then display specification of measurement. It will display frequency or RPM from prescale value by measuring the input frequency. For example, the prescale value when need to display the RPM as below. For example, what is prescale value  $\alpha$  when rpm is displayed?

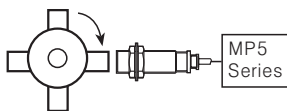

$$\begin{aligned} \text{RPM} &= f \times \alpha \\ &= f \times 60 \times (1 / N) \\ &= f \times 60 \times (1 / 4) \\ &= f \times 60 \times 0.25 \\ &= f \times 15 \end{aligned}$$

- ※ f : Input pulse (Frequency) per sec.
- ※  $\alpha$  : Prescale value
- ※ N : Pulse number per 1 revolution

#### Prescale value ( $\alpha=15$ ) setting

Set Prescale value ( $\alpha$ ) as (X) and (y) separately in **P5C.AH**, **P5C.AY** (**P5C.b.H**, **P5C.b.Y**) of Parameter group 2.

Set Prescale ( $\alpha=15$ ) as (X):1,5000, y:10<sup>1</sup>

It is also able to get the same display value even though set as X=0.1500, y=10<sup>2</sup>

X setting range : 0.0001~9.9999

Y setting range : 10<sup>-9</sup> ~10<sup>9</sup>

### Display peak value monitoring function

It saves High Peak value **h.PEV** or Low Peak value **L.PEV** against display value.

- This function is to save the High Peak (**h.PEV**) value or Low Peak (**L.PEV**) value against the display value.
- Refer to Parameter group 0 for Reset.

### Delay monitoring function


It controls stably to limit L, LL output until certain output is displayed or all output until the equipment will be in a stable status against various change of input such as the starting current when the motor is running after power on.

### Starting correction timer function

(**StAr.t** mode of Parameter group 1)

This function is to inhibit the output come for the setting time. (Time setting range 0.0 to 99.9sec.)

Applicable output mode : S, H, L, B, I, F mode

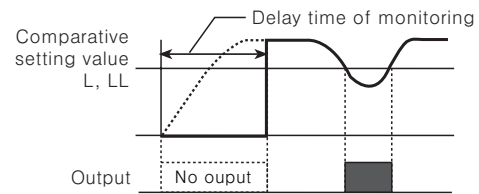

### Comparative output limit function


(**FdEFY** mode of Parameter1 group)

This function is to limit the LL, L output before H or HH output.

Applicable output mode : S, B, F mode

#### The output mode is S output mode

(Initial operation after supplying power)

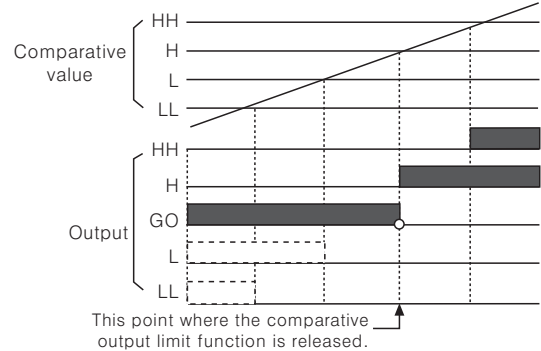


※L, LL comparative output does not operate after supplying power.

※When the output mode is S output mode, the setting value of HH, H, L, LL are not effected by each other. Therefore, HH value may be equal or lower than LL value.

#### The output mode is B output mode

(Initial operation after supplying power)

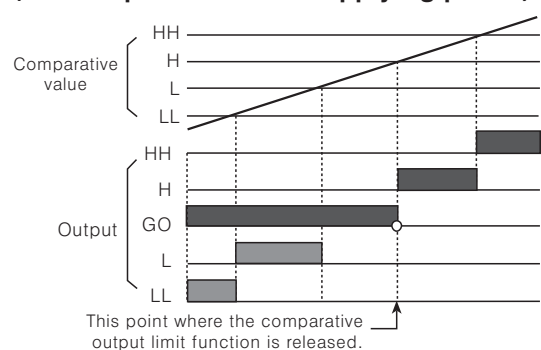

※L, LL comparative output does not operate after supplying power.

※Each setting value of HH, H, LL, L does not effect on each other. Therefore HH value may be equal or smaller than LL value.

Setting value should be LL<L<H<HH in sequence.

(A) Counter

(B) Timer

(C) Temp. controller

(D) Power controller

(E) Panel meter

(F) Tacho/Speed/Pulse meter

(G) Display unit

(H) Sensor controller

(I) Switching power supply

(J) Proximity sensor

(K) Photo electric sensor

(L) Pressure sensor

(M) Rotary encoder


(N) Stepping motor & Driver & Controller

(O) Graphic panel

(P) Production stoppage models & replacement

# MP5S/MP5Y/MP5W/MP5M Series


## ●The output mode is F output mode (Initial operation after supplying power)

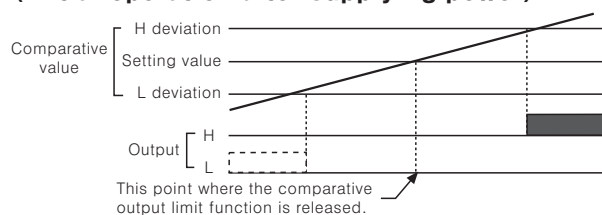

- ※Initial L comparative output does not operate after supplying power.
- ※The output mode is F output mode, the comparative output limit function will be released at the setting value(Standard setting).
- ※H and L deviation does not effect on each other. Therefore, H deviation setting value may be equal or smaller than L deviation setting value.

## ◎Hysteresis function

Set the Hysteresis value(A) for comparative setting value in order to prevent unstable operation due to output is ON/OFF frequently.

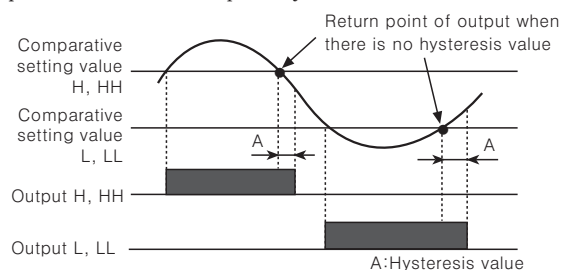

DOT position	Setting range
00000	0000 ~ 9999
0000.0	000.0 ~ 999.9
000.00	00.00 ~ 99.99
00.000	0.000 ~ 9.999
0.0000	0.000 ~ 0.999

- ※It is able to set "0" but when set "0", the actual operation will be as "1".
- ※The initial setting value is 0001.
- ※It is able to set in "hys" mode of Parameter group 1.

## ◎Auto-Zero time setting function

If there is no pulse input within setting time (Auto-zero time), it regards as the input signal is cut off then make the value as "00000" forcibly. Note that the Auto-zero time setting should be longer than the narrowest interval of input pulse. Otherwise it may be difficult to make the display value as "00000".

- Auto-zero time setting range:0.1 ~ 9999.9sec (Factory default setting : 9999.9sec)
- When the display value is "00000", each output will respond to how it was programmed for "0".
- Set the time in "Auto.A" and "Auto.b" mode of parameter group 1.

## ◎Lock setting function

This function is to set the enable or disable of each Parameter.

- LoFF : Disable to lock keys
- LoL 0 : Lock P0 ~ P3(Lock Parameter 0 ~ 3)
- LoL 1 : Lock P1 ~ P3(Lock Parameter 1 ~ 3)
- LoL 2 : Lock P2 ~ P3(Lock Parameter 2 ~ 3)
- LoL 3 : Lock P3(Lock Parameter 3 only)
- ※Set lock function in paramert group 3.

## ◎Inner hardware Lock setting function

This function is to lock LoL in Parameter group 3 by Inner hardware lock function in order to prevent wrong setting.

- h0(Hardware Lock0)
  - It is able to check and change LoL mode in Parameter group 3.
- h1(Hardware Lock1)
  - It is able to check and change LoL mode in Parameter group 3 but, unable to change.
- h2(Hardware Lock2)
  - It is unable to check and change LoL mode in Parameter group 3
- It is possible to lock or unlock after supplied power in inner hardware Lock setting.


### ●MP5S, MP5Y, MP5W Series



(Factory default setting)


※Inner hardware Lock setting pin is on inner PCB.

### ●MP5M Series

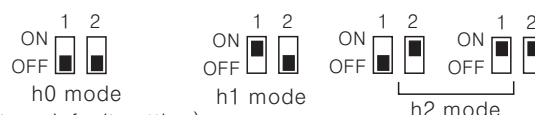

(Factory default setting)

※The position of inner hardware Lock setting switch.

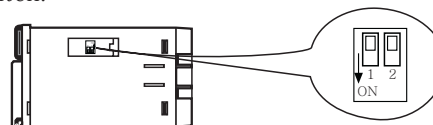

## ◎Data bank switching function

This function is to program 2 sets of comparative setting value and 2 kinds of prescale value(Data bank 1, Data bank 2) then able to select.

- When the 3 and 5 terminals are open circuited, the comparative value and prescale of Data bank 1 will be used.
- When the 3 and 5 terminals are short-circuited, the comparative value and prescale of Data bank 2 will be used.
- To save comparing value and prescale value at each data bank, select data bank to be saved at P.bAnU mode of parameter2, then when setting comparing value and prescale value, it will save in related data bank.

※This function is only for MP5W series.

# Pulse(Rate) Meter

## ◎Time unit selection function

Enable to display PV value in various time ranges.

- Time unit selection function can be set in parameter 2 group.
- Applicable mode : Mode F3 to F6


SEC	MIN
999.99sec.	999.99min.
9999.9sec.	9999.9min.
99min59.9sec.	99hour59.9min.
9hour59min59sec.	999hour59min.
99999sec.	99999min.

- ※There is no "dot" setting mode when set the time unit display function.
- ※Time range of (■) part is not displayed in MP5M series.

## ◎Case detachment(DIP switch)


Please detach the case after turning off the power.

- MP5W Series/MP5Y Series/MP5S-4N

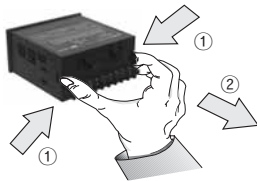

※Please press a pull of terminal ① and pull it toward ② direction.

- MP5M Series

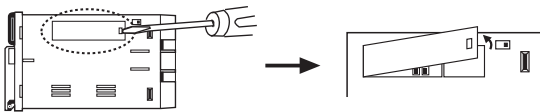


Pushing the Lock of DIP switch cover with a driver, squeeze and pull toward the outside, it detached.

※Please be careful of the injury caused by tools.


## ■Communication output

### ◎System ordering

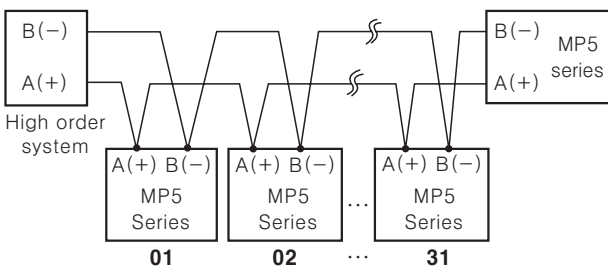


### ◎Communication control ordering

1. The communication control ordering of MP5 series is protocol (Not compatible with other system).
2. After 4sec. being supplied the power into upper system, then it starts to communicate.
3. Initial communication will be started by upper system. When Command signal comes out from upper system then MP5 series will response. If there is no response after 3times of the command signal from upper system, error will be occurred.

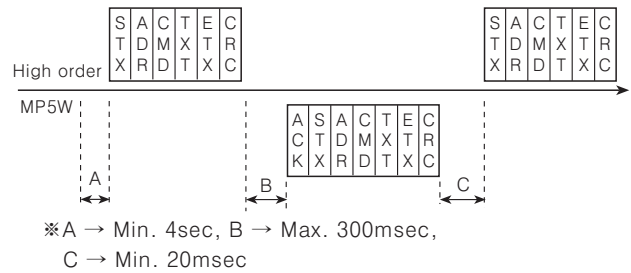

## ◎Communication Command and Block

Format of Command and Response

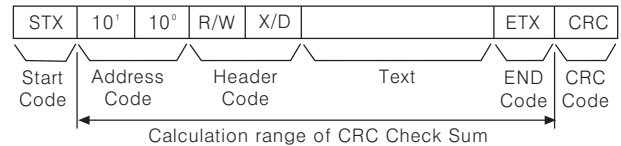

### ①Start Code

It shows the first of BLOCK

STX → [02H], in case of Response, ACK/NAK will be added.

### ②Address Code

This code is high order system can discern MP5 series and able to set within range of 00 to 99. (BCD ASCII)

### ③Header Code

It shows Command as 2 alphabets as below.

RX(Read request) → R[52H], X[58H]

RD(Read response) → R[52H], D[44H]

WX(Write request) → W[57H], X[58H]

WD(Write response) → W[57H], D[44H]

### ④Text

It indicates the detail contents of Command /Response. (Refer to command item)

### ⑤END Code

It indicates the end of BLOCK. ETX → [03H]

### ⑥CRC

CRC is Cyclic Redundancy Check and called polynomial code. CRC is for more reliable transmit/receive to check the error between transmitter and receiver.

There are CRC-8, CRC-16 and CRC-32, CRC-8 has been adopted in MP5 series according to CCITT-8 Polynomial regulation.

(Refer to CRC8 table) Result value is HEX 1 Byte.

### < CRC8 Table >

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	0x00	0x5E	0xBC	0xE2	0x61	0x3F	0xDD	0x83	0xC2	0x9C	0x7E	0x20	0xA3	0xFD	0x1F	0x41
1	0x9D	0xC3	0x21	0x7F	0xFC	0xA2	0x40	0x1E	0x5F	0x01	0xE3	0xBD	0x3E	0x60	0x82	0xDC
2	0x23	0x7D	0x9F	0xC1	0x42	0x1C	0xFE	0xA0	0xE1	0xBF	0x5D	0x03	0x80	0xDE	0x3C	0x62
3	0xBE	0xE0	0x02	0x5C	0xDF	0x81	0x63	0x3D	0x7C	0x22	0xC0	0x9E	0x1D	0x43	0xA1	0xFF
4	0x46	0x18	0xFA	0xA4	0x27	0x79	0x9B	0xC5	0x84	0xDA	0x38	0x66	0xE5	0xBB	0x59	0x07
5	0xDB	0x85	0x67	0x39	0xBA	0xE4	0x06	0x58	0x19	0x47	0xA5	0xFB	0x78	0x26	0xC4	0x9A
6	0x65	0x3B	0xD9	0x87	0x04	0x5A	0xB8	0xE6	0xA7	0xF9	0x1B	0x45	0xC6	0x98	0x7A	0x24
7	0xF8	0xA6	0x44	0x1A	0x99	0xC7	0x25	0x7B	0x3A	0x64	0x86	0xD8	0x5B	0x05	0xE7	0xB9
8	0x8C	0xD2	0x30	0x6E	0xED	0xB3	0x51	0x0F	0x4E	0x10	0xF2	0xAC	0x2F	0x71	0x93	0xCD
9	0x11	0x4F	0xAD	0xF3	0x70	0x2E	0xCC	0x92	0xD3	0x8D	0x6F	0x31	0xB2	0xEC	0x0E	0x50
A	0xAF	0xF1	0x13	0x4D	0xCE	0x90	0x72	0x2C	0x6D	0x33	0xD1	0x8F	0x0C	0x52	0xB0	0xEE
B	0x32	0x6C	0x8E	0xD0	0x53	0x0D	0xEF	0xB1	0xF0	0xAE	0x4C	0x12	0x91	0xCF	0x2D	0x73
C	0xCA	0x94	0x76	0x28	0xAB	0xF5	0x17	0x49	0x08	0x56	0xB4	0xEA	0x69	0x37	0xD5	0x8B
D	0x57	0x09	0xEB	0xB5	0x36	0x68	0x8A	0xD4	0x95	0xCB	0x29	0x77	0xF4	0xAA	0x48	0x16
E	0xE9	0xB7	0x55	0x0B	0x88	0xD6	0x34	0x6A	0x2B	0x75	0x97	0xC9	0x4A	0x14	0xF6	0xA8
F	0x74	0x2A	0xC8	0x96	0x15	0x4B	0xA9	0xF7	0xB6	0xE8	0x0A	0x54	0xD7	0x89	0x6B	0x35

- (A) Counter
- (B) Timer
- (C) Temp. controller
- (D) Power controller
- (E) Panel meter
- (F) Tacho/Speed/Pulse meter
- (G) Display unit
- (H) Sensor controller
- (I) Switching power supply
- (J) Proximity sensor
- (K) Photo electric sensor
- (L) Pressure sensor
- (M) Rotary encoder
- (N) Stepping motor & Driver & Controller
- (O) Graphic panel
- (P) Production stoppage models & replacement

# MP5S/MP5Y/MP5W/MP5M Series

## ◎Communication Command

●The Characteristic(Number) at " " is ASCII.

Sort	ACK	STX	Addr	Command	Bank	Code	+/-	10 <sup>5</sup>	10 <sup>4</sup>	10 <sup>3</sup>	10 <sup>2</sup>	10 <sup>1</sup>	10 <sup>0</sup>	DP	ETX	CRC
Read request	X	02H		"R"	"X"			"0"	"0"	"0"	"0"	"0"	"0"	"0"	03H	CRC
Read response		06H	02H		"R"	"D"									03H	CRC
Write request	X	02H		"W"	"X"										03H	CRC
Write response		06H	02H		"W"	"D"									03H	CRC

P 0	Process Value
C 0	Comparative Value HH
C 1	Comparative Value H
C 2	Comparative Value L
C 3	Comparative Value LL
K 0	Peak Value Max.
K 1	Peak Value Min.
X 0	Prescaling Value X.Ain
X 1	Prescaling Value X.Bin
Y 0	Prescaling Value Y.Ain
Y 1	Prescaling Value Y.Bin
R 0	Reset control of maximum/minimum values

●Read[RX] of measurement :

Address 01, Command RX

1. Command(Upper)

- ①Command
- ②Application : Address(01), Header code (RX), Current value (P0) of Bank (0), CRC Check sum (B5H)

STX	0	1	R	X	0	P	0	+	0	0	0	0	0	0	0	ETX	CRC
Start	Address	Command	Bank	Command	Symbol	10 <sup>5</sup>	10 <sup>4</sup>	10 <sup>3</sup>	10 <sup>2</sup>	10 <sup>1</sup>	10 <sup>0</sup>	Decimal point	END	Check sum			
02H	30H	31H	52H	58H	30H	50H	30H	2BH	30H	30H	30H	30H	30H	30H	03H	B5H	

2. Response

①Normal receive : Adding ACK[06H] to current value of Data transmission Bank (0) is +1.234.

ACK	STX	0	1	R	D	0	P	0	+	0	0	1	2	3	4	3	ETX	CRC
ACK	Start	Address	Command	Bank	Command	Symbol	10 <sup>5</sup>	10 <sup>4</sup>	10 <sup>3</sup>	10 <sup>2</sup>	10 <sup>1</sup>	10 <sup>0</sup>	Dec-imal point	End	Check sum			
06H	02H	30H	31H	52H	44H	30H	50H	30H	2BH	30H	30H	31H	32H	33H	34H	33H	03H	23H

②Normal receive: Adding ACK[06H] to current value of Data transmission Bank (0) is -56.7.

ACK	STX	0	1	R	D	0	P	0	-	0	0	1	5	6	7	1	ETX	CRC
ACK	Start	Address	Command	Bank	Command	Symbol	10 <sup>5</sup>	10 <sup>4</sup>	10 <sup>3</sup>	10 <sup>2</sup>	10 <sup>1</sup>	10 <sup>0</sup>	Dec-imal point	End	Check sum			
06H	02H	30H	31H	52H	44H	30H	50H	30H	2DH	30H	30H	31H	35H	36H	37H	31H	03H	42H

●Write[WX] of measurement / setting value :

Address 01, Command WX

1. COMMAND(Upper)

- ①Command
- ②Application : Address (01), Head Code (WX), The setting value into SV-HH (C0) of BANK (0) is +1.234.

STX	0	1	W	X	0	C	0	+	0	0	1	2	3	4	5	ETX	CRC
Start	Address	Command	Bank	Command	Symbol	10 <sup>5</sup>	10 <sup>4</sup>	10 <sup>3</sup>	10 <sup>2</sup>	10 <sup>1</sup>	10 <sup>0</sup>	Dec-imal point	End	Check sum			
02H	30H	31H	57H	58H	30H	43H	30H	2BH	30H	30H	31H	32H	33H	34H	33H	03H	5DH

2. Response (MP5 series)

When completing the operation after normal receive.

ACK	STX	0	1	W	D	0	C	0	+	0	0	1	2	3	4	3	ETX	CRC
ACK	Start	Address	Command	Bank	Command	Symbol	10 <sup>5</sup>	10 <sup>4</sup>	10 <sup>3</sup>	10 <sup>2</sup>	10 <sup>1</sup>	10 <sup>0</sup>	Dec-imal point	End	Check sum			
06H	02H	30H	31H	57H	44H	30H	43H	30H	2BH	30H	30H	31H	32H	33H	34H	35H	03H	3CH

3. CRC error : Transmit NAK [15H] only.

(Need to transmit again)

4. Other : No response of ACK/NAK

- ①After receiving STX, the address are not the same.
  - ②When receive buffer is overflown.
  - ③When the baud rate or other communication setting value are not the same.
5. If there is no response of ACK/NAK
- ①Check the status of lines
  - ②Check the communication condition (Setting value)
  - ③When the problem is occurred due to noise, try to operate communication 3 times more until recovery
  - ④When communication is failed frequently, please adjust the communication speed.

## ■Precaution for communicating with MP5 series

1. It is not possible to modify Parameter (Baud rate, Address etc) related to communication of MP5 series on line with high order systems such as PC, PLC etc. (Error will be occurred)
2. Firstly make communication Parameter of MP5 series and high order system at one.
3. It is not allow to set overlapping communication number at the same communication line. (Error will be occurred)
4. Please use Twist pair wire for RS485 communication.
5. The total length of communication is 800m and over 32 equipment can be connected.
6. When connect communication cable between MP5 series and high order system, the vertical resistance (100~200Ω) must be installed at between both communication lines.
7. Please check Parameter related to communication
  - ①Start bit : 1bit (Fix)
  - ②Stop bit : 1bit (Fix)
  - ③Parity bit : Non (Fix)
  - ④Data bit : 8bit (Fix)
  - ⑤Baud rate : 2400, 4800, 9600 (Settable)
  - ⑥Address : 00 ~ 99 (Settable)